

IND-PM855F

Pentium M

Single Board Computer

USER'S MANUAL

Version 1.0

Acknowledgments

Award is a registered trademark of Award Software International, Inc.

PS/2 is a trademark of International Business Machines Corporation.

Intel and Celeron are registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

Winbond is a registered trademark of Winbond Electronics Corporation.

IND is registered trademarks of Indocomp Systems Inc.

All other product names or trademarks are properties of their

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION

1-1	About This Manual	1-2
1-2	System Specification	1-3
1-3	Extra Industrial Application Features	1-5
1-4	Safety Precautions	1-6

CHAPTER 2 HARDWARE CONFIGURATION

2-1	Jumper & Connector Quick Reference Table	2-2
2-2	Component Locations	2-3
2-3	How to Set the Jumpers	2-4
2-4	COM Port Connector	2-6
2-5	RS232/422/485(COM2) Selection	2-7
2-6	Keyboard or PS/2 Mouse Connector	2-8
2-7	Keyboard or PS/2 Mouse Selection	2-8
2-8	External Keyboard Connector	2-9
2-9	Reset Connector	2-9
2-10	Hard Disk Drive LED Connector	2-9
2-11	ATX Power Button	2-10
2-12	External Speaker Connector	2-10
2-13	Power Led Connector	2-10
2-14	KeyLock Connector	2-11
2-15	Clear CMOS Data Selection	2-11
2-16	CPU Fan Connector	2-12
2-17	System Fan Connector	2-12
2-18	VGA CRT Connector	2-13
2-19	Hard Disk Drive Connector	2-14
2-20	Floppy Disk Drive Connector	2-16
2-21	Printer Connector	2-17
2-22	Universal Serial Bus Connector	2-18
2-23	IrDA Connector	2-19
2-24	LAN Connector	2-20
2-25	GigaLAN (LAN2) Enable/Disable Selection	2-22
2-26	ATX Power Connector	2-23
2-27	5VSB Connector	2-24
2-28	Memory Installation	2-24

2-29	Reset / NMI / Clear Watchdog Selection	2-25
2-31	Sound Connector	2-26
2-31	CD Audio-in Connector	2-26
2-32	CF Card Master/Slave Selection	2-27
2-33	AT/ATX Power Selection	2-28
2-34	ATX Power Selection	2-29
2-35	Digital I/O Connector	2-30
2-36	LVDS Connector	2-31
2-37	LVDS Panel Voltage Selection	2-32
2-38	Inverter Connector	2-32
2-39	DVO Connector	2-33

CHAPTER 3 SOFTWARE UTILITIES

3-1	Introduction	3-2
3-2	VGA Driver Utility	3-3
3-3	Flash BIOS Update	3-4
3-4	LAN Driver Utility	3-6
3-5	Sound Driver Utility	3-7
3-6	Intel Chipset Software Installation Utility	3-8
3-7	USB2.0 Software Installation Utility	3-9
3-8	Watchdog Timer Configuration	3-10

CHAPTER 4 AWARD BIOS SETUP

4-1	Introduction	4-2
4-2	Entering Setup	4-3
4-3	The Standard CMOS Features	4-4
4-4	The Advanced BIOS Features	4-8
4-5	Advanced Chipset Features	4-11
4-6	Integrated Peripherals	4-13
4-7	Power Management Setup	4-18
4-8	PNP/PCI Configuration	4-21
4-9	PC Health Status	4-23
4-10	Frequency Control	4-24
4-11	Load Fail-Safe Defaults	4-25
4-12	Load Optimized Defaults	4-25
4-13	Password Setting	4-26
4-14	Save & Exit Setup	4-27
4-15	Exit Without Saving	4-28

APPENDIX A EXPANSION BUS

ISA Bus Pin Assignment	A-2
PCI Bus Pin Assignment	A-3
EPCI Connector	A-4
Compact Flash Card Pin Assignment	A-5

APPENDIX B TECHNICAL SUMMARY

Block Diagram	B-2
Interrupt Map	B-3
RTC & CMOS RAM Map	B-4
Timer & DMA Channels Map	B-5
I/O & Memory Map	B-6

INTRODUCTION

CHAPTER

1

This chapter gives you the information for IND-PM855F. It also outlines the System specification.

Section includes:

- About This Manual
- System Specifications
- Extra Industrial Application Features
- Safety precautions

Experienced users can skip to chapter 2 on page 2-1 for Quick Start.

1-1. ABOUT THIS MANUAL

Thank you for purchasing our IND-PM855F Socket 478 Pentium M Full Size Card enhanced with VGA / Sound/ 2LAN, which is fully PC / AT compatible. IND-PM855F provides faster processing speed, greater expandability and can handle more task than before. This manual is designed to assist you how to install and set up the system. It contains four chapters. The user can apply this manual for configuration according to the following chapters :

Chapter 1 Introduction

This chapter introduces you to the background of this manual, and the specification for this system. Final part of this chapter will indicate you how to avoid damaging this Embedded Card.

Chapter 2 Hardware Configuration

This chapter outlines the component location and their functions. In the end of this chapter, you will learn how to set jumper and how to configure this card to meet your own needs.

Chapter 3 Software Utilities

This chapter contains helpful information for proper installations of the VGA utility, LAN utility, sound utility, and BIOS update. It also describes the Watchdog timer configuration.

Chapter 4 Award BIOS Setup

This chapter indicates you how to set up the BIOS configurations.

Appendix A Expansion Bus

This Appendix introduces you the expansion bus for ISA/PCI Bus and EPCI Bus.

Appendix B Technical Summary

This section gives you the information about the Technical maps.

1-2. SYSTEM SPECIFICATION

- **CPU (mPGA 478) :**

- Intel® Pentium® M processor in mPGA478 socket
- Available at 1.3~ 1.8GHz
- System bus frequency at 400MHz
- Auto detect voltage regulator

- **SYSTEM CHIPSET :**

- Intel® 855GME chipset

- **MEMORY :**

- Supports up to 2GB DDR SDRAM.
- Two 184-pin DDR DIMM sockets on board

- **CACHE :**

- Built-in CPU

- **REAL-TIME CLOCK / CALENDAR :**

- 256-byte battery backed CMOS RAM.
- Hardware implementation to indicate century rollover

- **BIOS :**

- Phoenix-AwardBIOS™ for plug & play function
- Memory size with 4 MB, with VGA BIOS

- **KEYBOARD/MOUSE CONNECTOR :**

- Mini DIN connector, selectable for Keyboard, PS/2 Mouse, or Y-Cable
- One additional 5-pin External keyboard connector

- **UNIVERSAL SERIAL BUS :**

- Universal Serial Bus Connector on board
- Supports up to four USB 2.0 ports.

- **BUS SUPPORT :**

- One ISA/PCI Bus
- One External EPCI Bus
- One Compact Flash Bus.

● **DISPLAY :**

Integrated Graphic in Intel® 855GME.
Support D-Sub 15 pin VGA.
Support 18/24bit LVDS connector.
Support 3.3V/5V LVDS Panel Power Selection.
Support 12V Panel Backlight.
* 24bit hardware is ready but Intel® does not recommend using.
Support DVO1 connector.

● **IDE INTERFACE :**

Two IDE ports support up to four IDE devices.
Supports UDMA 33/66/100.
Compact Flash is connected at secondary IDE Bus.
Compact Flash Master/Slave Mode Selectable.

● **FLOPPY DISK DRIVER INTERFACE :**

Supports up to two Floppy Disk Drives, 3.5" and 5.25".

● **LAN INTERFACE :**

Dual ports.
LAN 1: Intel® 82562ET 10/100 Mbps Ethernet.
LAN 2: Intel® 82541PI (10/100/1000).
Supports Wake-on-LAN with ATX power.

● **SOUND PORT:**

AC '97 Codec. Realtek ALC202A.

● **SERIAL PORT :**

Two high speed 16550 Compatible UARTs with Send / Receive 16 Byte FIFOs. COM1 for RS232; COM2 for RS232/422/485.

● **PARALLEL PORT :**

One port supports SPP / ECP / EPP Function.

● **HARDWARE MONITORING FUNCTION :**

Monitor Voltage, CPU Temperature and Cooling Fan.

● **IRDA PORT :**

One 5-pin Infrared connector
Supports IrDA v1.0 SIR protocol.

- **LED INDICATOR :**
HDD LED, Power LED.
- **OPERATING TEMPERATURE :**
0 to 60°C (32°F to 140°F)
- **INPUT POWER REQUIREMENT :**
ATX power: +5V, +12V, -12V, 5VSB.
AT power: +5V, +12V, -12V.
- **BOARD DIMENSION :**
338.5mm x 122mm (13.33" x 4.8")
- **BOARD NET WEIGHT :**
370 grams (0.82 lb)

1-3. EXTRA INDUSTRIAL APPLICATION FEATURES

- **WATCHDOG TIMER:**
Watchdog Timer controllable by software, customer application 1~255 second watchdog timer time-out value.
Reset upon Mouse/Keyboard, SMI or System Reset.
- **DIGITAL I/O PORT:**
4 bit input and 4 bit output digital port availability.
Decoding address at I/O 400H.
General purpose and Input/Output buffer embedded.

1-4. SAFETY PRECAUTIONS

Follow the messages below to avoid your systems from damage:

1. Avoid your system from static electricity on all occasions.
2. Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
3. Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

HARDWARE CONFIGURATION

CHAPTER

2

***** QUICK START *****

Helpful information describes the jumper & connector settings, and component locations.


Section includes:

- Jumper & Connector Quick Reference Table
- Component Locations
- Configuration and Jumper settings
- Connector's Pin Assignments

2-1. JUMPER & CONNECTOR QUICK REFERENCE TABLE

COM Port Connector	COM1, COM2
RS232/422/485 (COM2) Selection	JP2
Keyboard/Mouse Connector	DIN1
Keyboard/Mouse Selection	JP16
External Keyboard Connector	EXKB1
Reset Connector	JPANEL1 (13,15)
Hard Disk Drive LED Connector	JPANEL1 (9,11)
ATX Power Button	JPANEL1 (14,16)
External Speaker Connector	JPANEL1 (1,3,5,7)
Power LED Connector	JPANEL1 (8,10,12)
KeyLock Connector	JPANEL1 (17,18)
Clear CMOS Data Selection	JP13
CPU Fan Connector	JCFAN1
System Fan Connector	JSFAN1
VGA Connector	VGA1
Hard Disk Drive Connector	IDE1, IDE2
Floppy Disk Drive Connector	FDD1
Printer Connector	LPT1
Universal Serial Bus Connector	USB1, USB2
IrDA Connector	IRDA1, JPANEL1 (21-24)
LAN Connector	LAN1, LAN2
GigaLAN (LAN2) Enable/Disable Selection	JP9
ATX Power Connector	JATXPWR1
5VSB Connector	JP6
Memory Installation	DIM1, DIM2
Reset/NMI Selection	JP18
Sound Connector	JP4
CD Audio-In Connector	JCDIN1, JCDIN2
Compact Flash Card Master/Slave Selection	JP5
AT/ATX Power Selection	JP14
ATX Power Selection	JP15
Digital I/O Connector	DIO1
LVDS Connector	J2
LVDS Voltage Selection	JP7
Inverter Connector	J3
DVO Connector	DVO1

2-2. COMPONENT LOCATIONS

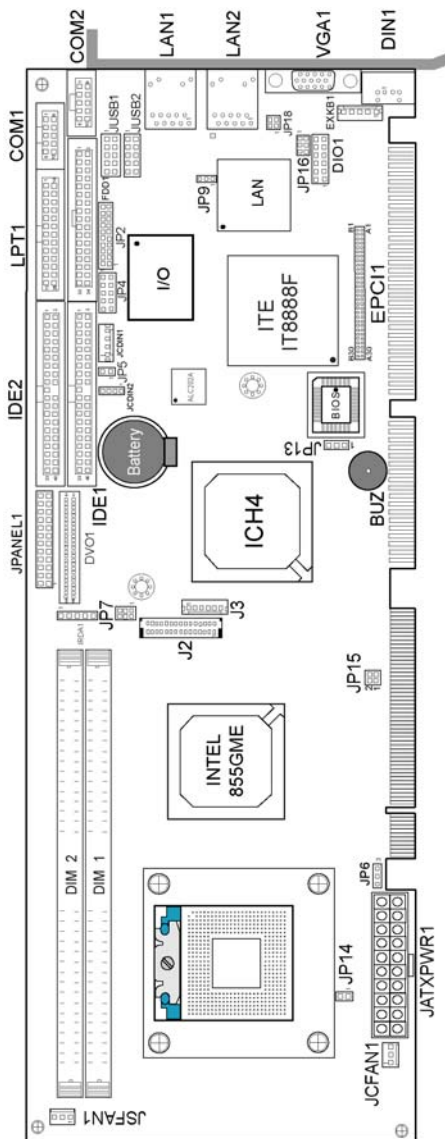


IND-PM855F Connector, Jumper and Component locations

2-3. HOW TO SET THE JUMPERS

You can configure your board by setting jumpers. Jumper is consists of two or three metal pins with a plastic base mounted on the card, and by using a small plastic "cap", Also known as the jumper cap (with a metal contact inside), you are able to connect the pins. So you can set-up your hardware configuration by "open" or "close" pins.

The jumper can be combined into sets that called jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks like.

JUMPERS AND CAPS

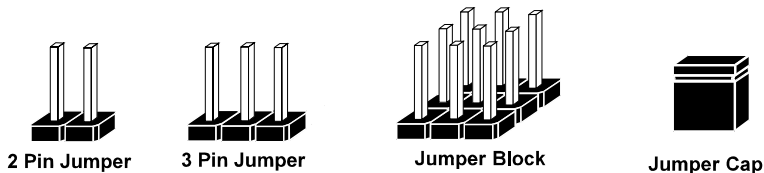

If a jumper has three pins (for examples, labelled PIN1, PIN2, and PIN3), You can connect PIN1 & PIN2 to create one setting and shorting. You can either connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below shows what the manual diagrams look and what they represent.


JUMPER DIAGRAMS




Jumper Cap
looks like this




2 pin Jumper
looks like this



3 pin Jumper
looks like this

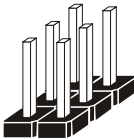

Jumper Block
looks like this



JUMPER SETTINGS



2 pin Jumper close(enabled)
Looks like this



1



3 pin Jumper
2-3 pin close(enabled)
Looks like this



1



Jumper Block
1-2 pin close(enabled)
Looks like this



1 2


2-4. COM PORT CONNECTOR

COM1 : COM1 Connector

COM1 is fixed as RS-232.

The pin assignment is as follows :

PIN	ASSIGNMENT
1	COM1_DCD
2	COM1_RXD
3	COM1_TXD
4	COM1_DTR
5	GND
6	COM1_DSR
7	COM1_RTS
8	COM1_CTS
9	COM1_RI
10	NC




COM1

COM2 : COM2 Connector

The COM2 is selectable as RS-232/422/485.

The pin assignment is as follows :

PIN	ASSIGNMENT		
	RS-232	RS-422	RS-485
1	COM2_DCD	TX-	TX-
2	COM2_RXD	TX+	TX+
3	COM2_TXD	RX+	RX+
4	COM2_DTR	RX-	RX-
5	GND	GND	GND
6	COM2_DSR	RTS-	NC
7	COM2_RTS	RTS+	NC
8	COM2_CTS	CTS+	NC
9	COM2_RI	CTS-	NC
10	NC	NC	NC






COM2

2-5. RS232/422/485 (COM2) SELECTION

JP2 : RS-232/422/485 (COM2) Selection

This connector is used to set the COM2 function.

The jumper settings are as follows :

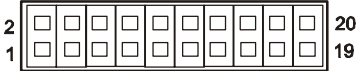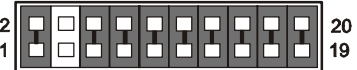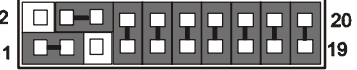COM 2 Function	Jumper Settings (pin closed)	Jumper Illustrations
RS-232	Open	 <p>JP2</p>
RS-422	1-2, 5-6, 7-8 9-10, 11-12, 13-14 15-16, 17-18, 19-20	 <p>JP2</p>
RS-485	1-3, 4-6, 7-8, 9-10 11-12, 13-14, 15-16 17-18, 19-20	 <p>JP2</p>


*** Manufactory default --- RS-232.

2-6. KEYBOARD OR PS/2 MOUSE CONNECTOR

DIN1 : Keyboard or PS/2 Mouse Connector

DIN connector can support keyboard, Y-cable, or PS/2 Mouse, user may select the right device to used on “Keyboard or PS/2 Mouse Selection”. The pin assignments are as follows :

PIN	ASSIGNMENT	
	Keyboard	PS/2 Mouse
1	KBDATA	MSDATA
2	MSDATA	MSDATA
3	GND	GND
4	5VSB	5VSB
5	KBCLK	MSCLK
6	MSCLK	MSCLK

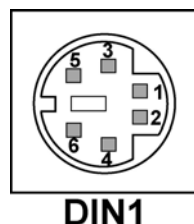

2-7. KEYBOARD OR PS/2 MOUSE SELECTION

JP16 : Keyboard or PS/2 Mouse Selection

For Y-Cable user, please set the jumper same as AT keyboard. The jumper settings are as follows:

DEVICE TYPE	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
AT KEYBOARD	3-5 4-6	<p style="text-align: center;">JP16</p>
PS/2 MOUSE	1-3 2-4	<p style="text-align: center;">JP16</p>


*** Manufactory default -- AT Keyboard

2-8. EXTERNAL KEYBOARD CONNECTOR

EXKB1 : External Keyboard Connector

The pin assignment is as follows :

PIN	ASSIGNMENT
1	5VSB
2	GND
3	NC
4	KDAT
5	KCLK



2-9. RESET CONNECTOR

JPANEL1 (13,15) : Reset Connector.

The pin assignment is as follows :

PIN	ASSIGNMENT
13	GND
15	RST_SW




2-10. HARD DISK DRIVE LED CONNECTOR

JPANEL1 (9,11) : Hard Disk Drive LED Connector

The pin assignment is as follows :

PIN	ASSIGNMENT
9	PULL-HIGH TO VCC3_3
11	HD_LED

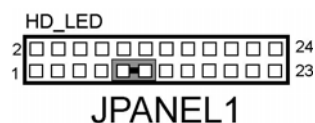

2-11. ATX POWER BUTTON

JANEL1 (14,16) : ATX Power Button

The pin assignment is as follows :

PIN	ASSIGNMENT
14	PULL-HIGH TO 5VSB
16	PWB_SIOJ



2-12. EXTERNAL SPEAKER CONNECTOR

JANEL1 (1,3,5,7) : External Speaker Connector

The pin assignment is as follows :

PIN	ASSIGNMENT
1	SPK3
3	NC
5	NC
7	PULL-HIGH TO VCC




2-13. POWER LED CONNECTOR

JANEL1 (8,10,12) : Power LED Connector

The pin assignment is as follows:

PIN	ASSIGNMENT
8	PULL-HIGH TO VCC
10	PULL-HIGH TO VCC
12	GND




2-14. KEYLOCK CONNECTOR

JPANEL1 (17,18) : Keylock Connector

The pin assignment is as follows:

PIN	ASSIGNMENT
17	KEYLOCK
18	GND



2-15. CLEAR CMOS DATA SELECTION

JP13 : Clear CMOS Data Selection

The selections are as follows :

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Normal	1-2	<p>JP13</p>
Clear CMOS	2-3	<p>JP13</p>


*** Manufacturing Default is set as Normal.

Note: To clear CMOS data, user must power-off the computer and set the jumper to "Clear CMOS" as illustrated above. After five to six seconds, set the jumper back to "Normal" and power-on the computer.

2-16. CPU FAN CONNECTOR

JCFAN1 : CPU Fan connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	+12V
3	FAN1




JCFAN1

2-17. SYSTEM FAN CONNECTOR

JSFAN1 : System Fan connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	+12V
3	FAN0




JSFAN1

2-18. VGA CONNECTOR

VGA1 : VGA CRT Connector

The pin assignments are as follows:


PIN	ASSIGNMENT
1	RED
2	GREEN
3	BLUE
4	NC
5	GND
6	GND
7	GND
8	GND
9	VCC
10	GND
11	NC
12	VGA IIC DATA
13	HSYNC
14	VSYNC
15	VGA IIC CLK

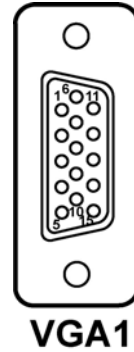

2-19. HARD DISK DRIVE CONNECTOR

IDE1: Hard Disk Drive Connector

The IND-PM855F possesses two HDD connectors, IDE1 and IDE2. The pin assignments are as follows:




IDE1

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	PIDERSTJ	2	GND
3	PDD7	4	PDD8
5	PDD6	6	PDD9
7	PDD5	8	PDD10
9	PDD4	10	PDD11
11	PDD3	12	PDD12
13	PDD2	14	PDD13
15	PDD1	16	PDD14
17	PDD0	18	PDD15
19	GND	20	NC
21	PDREQ	22	GND
23	PDIOWJ	24	GND
25	PDIORJ	26	GND
27	PDIORDY	28	PULL-LOW
29	PDDACKJ	30	GND
31	IRQ14	32	NC
33	PDA1	34	PD66_DECT
35	PDA0	36	PDA2
37	PDCSJ1	38	PDCSJ3
39	IDEACTPJ	40	GND

IDE2: Hard Disk Drive Connector

The pin assignments are as follows:

**IDE2**


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	SIDERSTJ	2	GND
3	SDD7	4	SDD8
5	SDD6	6	SDD9
7	SDD5	8	SDD10
9	SDD4	10	SDD11
11	SDD3	12	SDD12
13	SDD2	14	SDD13
15	SDD1	16	SDD14
17	SDD0	18	SDD15
19	GND	20	NC
21	SDREQ	22	GND
23	SDIOWJ	24	GND
25	SDIORJ	26	GND
27	SDIORDY	28	PULL-LOW
29	SDDACKJ	30	GND
31	IRQ15	32	NC
33	SDA1	34	SD66_DECT
35	SDA0	36	SDA2
37	SDCSJ1	38	SDCSJ3
39	IDEACTSJ	40	GND

2-20. FLOPPY DISK DRIVE CONNECTOR

FDD1 : Floppy Disk Drive Connector

You can use a 34-pin daisy-chain cable to connect two-FDDs. On one end of this cable is a 34-pin flat cable to attach the FDD on the board, and the other side is attaches two FDDs.

The pin assignments are as follows :



FDD1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	RWCJ
3	GND	4	NC
5	NC	6	DS1J
7	GND	8	INDEXJ
9	GND	10	MOAJ
11	GND	12	DSBJ
13	GND	14	DSAJ
15	GND	16	MOBJ
17	GND	18	DIRJ
19	GND	20	STEPJ
21	GND	22	WDJ
23	GND	24	WENJ
25	GND	26	TRAK0J
27	GND	28	WPJ
29	GND	30	RDATAJ
31	GND	32	HEADJ
33	GND	34	DSKCHGJ

2-21. PRINTER CONNECTOR

LPT1 : Printer Connector

As to link the Printer to the card, you need a cable to connect both DB25 connector and parallel port.

The pin assignments are as follows :



LPT1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	STBJ	14	ALFJ
2	PDR0	15	ERRORJ
3	PDR1	16	PARINITJ
4	PDR2	17	SLCTINJ
5	PDR3	18	GND
6	PDR4	19	GND
7	PDR5	20	GND
8	PDR6	21	GND
9	PDR7	22	GND
10	ACKJ	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SLCTJ	26	NC

2-22. UNIVERSAL SERIAL BUS CONNECTOR

JUSB1: Universal Serial Bus Connector

The IND-PM855F possesses two USB connectors, JUSB1 and JUSB2. The pin assignments are as follows:


PIN	ASSIGNMENT
1	USBV1
2	USBV0
3	D1-
4	D0-
5	D1+
6	D0+
7	GND
8	GND
9	NC
10	NC



JUSB2: Universal Serial Bus Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	USBV3
2	USBV2
3	D3-
4	D2-
5	D3+
6	D2+
7	GND
8	GND
9	NC
10	NC



2-23. IRDA CONNECTOR

IRDA1: IrDA (Infrared) Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC
2	NC
3	IRRX
4	GND
5	IRTX




IRDA1

JPANEL1 (21-24) : IrDA (Infrared) Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
21	VCC
22	GND
23	IRTX2
24	IRRX2




JPANEL1

2-24. LAN CONNECTOR

LAN1: LAN Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	TX+
2	TX-
3	RX+
4	CGND
5	CGND
6	RX-
7	CGND
8	CGND

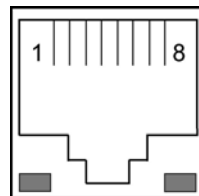

LAN1

LAN LED Indicator:

Left Side LED

Green Color On	10/100 LAN Speed Indicator
Off	No LAN switch/ hub connected.


Right Side LED

Yellow Color Blinking	LAN Message Active
Off	No LAN Message Active

LAN2: LAN Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	MDI_0+
2	MDI_0-
3	MDI_1+
4	MDI_2+
5	MDI_2-
6	MDI_1-
7	MDI_3+
8	MDI_3-

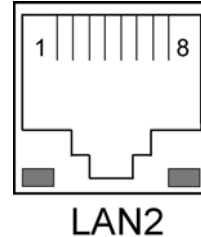**LAN LED Indicator:****Left Side LED**

Green Color On	10/100 LAN Speed Indicator
Orange Color On	Giga LAN Speed Indicator
Off	No LAN switch/ hub connected.



Right Side LED

Yellow Color Blinking	LAN Message Active
Off	No LAN Message Active

2-25. GIGALAN (LAN2) ENABLE/DISABLE SELECTION

JP9 : GigaLAN (LAN2) Enable/Disable Selection.

The selections are as follows:


FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Enable	open	 1 JP9
Disable	2-3	 1 JP9

*** Manufactory default – Enable.

2-26. ATX POWER CONNECTOR

JATXPWR1 : ATX Power Connector

The pin assignments are as follows:




PIN	ASSIGNMENT
1	3.3V
2	3.3V
3	GND
4	VCC
5	GND
6	VCC
7	GND
8	POK
9	5VSB
10	+12V
11	3.3V
12	-12V
13	GND
14	PS_ON
15	GND
16	GND
17	GND
18	-5V
19	VCC
20	VCC

2-27. 5VSB CONNECTOR

JP6 : ATX Power Signal Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	5VSB
2	GND
3	PS_ON

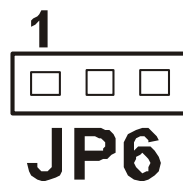

2-28. MEMORY INSTALLATION

IND-PM855F CPU Card can support up to 2GB in two DIMM sockets.

DRAM BANK CONFIGURATION



DIMM 1	DIMM 2	TOTAL MEMORY
128MB	128MB	256MB
256MB	256MB	512GB
512MB	512MB	1GB
1GB	1GB	2GB

🔔 If want to install two DIMMs, please make sure both of memories are exactly the same brand and same model.

2-29. RESET/NMI SELECTION

JP18 : Reset/NMI Watchdog Selection

The selections are as follows:

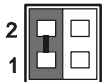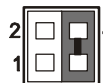FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
RESET	1-2	 JP18
NMI	3-4	 JP18


***Manufacturing Default : Reset.

2-30. SOUND CONNECTOR

JP4 : Sound Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	MIC-IN
2	AUDIO_GND
3	AUDIO_GND
4	AUDIO_GND
5	LINE-L
6	LINE-R
7	AUDIO_GND
8	AUDIO_GND
9	SPK-L
10	SPK-R

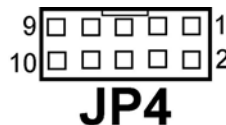


2-31. CD AUDIO-IN CONNECTOR

JCDIN1 : CD Audio-In Connector

The pin assignments are as follows:


PIN	ASSIGNMENT
1	CD_L
2	CDGND
3	CDGND
4	CD_R



JCDIN2 : CD Audio-In Connector

The pin assignments are as follows:

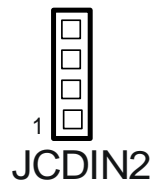

PIN	ASSIGNMENT
1	CD_L
2	CDGND
3	CD_R
4	CDGND



2-32. CF CARD MASTER/SLAVE SELECTION

JP5 : Compact Flash Card Master/Slave Selection.

The selections are as follows:

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Master	1-2	 1 JP5
Slave	Open	 1 JP5



*** Manufactory default --- Master.

- Because ATA33 cable and ATA66/100 cable pin34 specification are different, therefore, while CF card and other devices are using IDE 2 channel at the same time, the ATA66/100 cable will make the device detecting time expand. Thus, it is suggested to use ATA33 cable to avoid the problem.

2-33. AT/ATX POWER SELECTION

JP14 : AT/ATX Power Selection.

The selections are as follows:


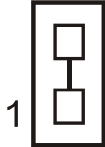
FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
AT	open	 JP14
ATX	1-2	 JP14

*** Manufactory default --- ATX.

2-34. ATX POWER SELECTION

JP15 : ATX Power Selection.

The selections are as follows:

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Power from Mainboard	1-2 3-4	 JP15
Power from Backplane	open	 JP15

*** Manufactory default --- Power from Backplane.

2-35. DIGITAL I/O PORT

DIO1 : Digital Input/Output Port.
The pin assignments are as follows:



PIN	ASSIGNMENT
1	Input bit 0
2	Output bit 0
3	Input bit 1
4	Output bit 1
5	Input bit 2
6	Output bit 2
7	Input bit 3
8	Output bit 3
9	GND
10	GND
11	VCC
12	+12V


Input Port: Read I/O 400H.
Output Port: Write I/O 400H.

2-36. LVDS CONNECTOR

J2 : LVDS Connector.

The pin assignments are as follows:



PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	LVDS_VCC	2	GND
3	CLKBM	4	CLKBP
5	GND	6	YBM2
7	YBP2	8	GND
9	YBM1	10	YBP1
11	YBP3	12	YBM3
13	YBP0	14	YBM0
15	GND	16	CLKAP
17	CLKAM	18	GND
19	YAP2	20	YAM2
21	GND	22	YAP1
23	YAM1	24	GND
25	YAP0	26	YAM0
27	YAP3	28	YAM3
29	LVDS_VCC	30	LVDS_VCC

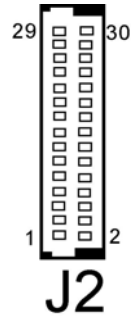

2-37. LVDS PANEL VOLTAGE SELECTION

JP7 : LVDS Panel Voltage Selection.

The selections are as follows:

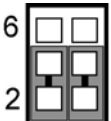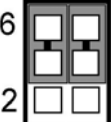SELECTION	JUMPER SETTING	JUMPER ILLUSTRATION
LVDS_VCC3	1-3 2-4	 JP7
LVDS_VCC5	3-5 4-6	 JP7


*** Manufactory default --- LVDS_VCC3.

2-38. INVERTER CONNECTOR

J3 : Inverter Connector

The pin assignment is as follows:


PIN	ASSIGNMENT
1	+12V
2	GND
3	VCC
4	NC
5	ENABKL (Inverter backlight ON/OFF control signal)



2-39. DVO CONNECTOR

DVO1 : DVO Connector

The pin assignments are as follows :



DVO1

PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	VCC	B1	+12V
A2	VCC	B2	+12V
A3	VCC	B3	GND
A4	3.3V	B4	GND
A5	3.3V	B5	DVO1_D0
A6	1.5V	B6	DVO1_D1
A7	MI2C_DATA	B7	DVO1_D2
A8	MI2C_CLK	B8	DVO1_D3
A9	DVO1_BLANKJ	B9	DVO1_D4
A10	DVO1_FLDSTL	B10	DVO1_D5
A11	GND	B11	DVO1_D6
A12	DVO1_CLK	B12	DVO1_D7
A13	DVO1_CLKJ	B13	DVO1_D8
A14	GND	B14	DVO1_D9
A15	DVO1_VSYNC	B15	DVO1_D10
A16	DVO1_HSYNC	B16	DVO1_D11
A17	MDVI_CLK	B17	DVO1_CINTRJ
A18	MDVI_DATA	B18	ADDDETECT
A19	PCIRSTJ	B19	ADDID4
A20	DVO1_CCLKINT	B20	ADDID5
A21	ADDID0	B21	ADDID6
A22	ADDID1	B22	ADDID7
A23	ADDID2	B23	REF14.318M
A24	ADDID3	B24	2.5V
A25	DVO_VREF	B25	2.5V

SOFTWARE UTILITIES

CHAPTER

3

This chapter comprises the detailed information of VGA driver, LAN driver, and Flash BIOS update. It also describes how to install the watchdog timer configuration.

Section includes:

- VGA Driver Utility
- Flash BIOS Update
- LAN Driver Utility
- Sound Driver Utility
- Intel Chipset Software Installation Utility
- USB2.0 Chipset Software Installation Utility
- Watchdog Timer Configuration

3-1. INTRODUCTION

Enclosed with our IND-PM855F package is our driver utility, which may comes in a form of a CD ROM disc or floppy diskettes. For CD ROM disc user, you will only need some of the files contained in the CD ROM disc, please kindly refer to the following chart:

Filename (Assume that CD ROM drive is D:)	Purpose
D:\AWDFLASH	For BIOS update utility
D:\VGA	Intel 855GME For VGA driver installation
D:\LAN	For LAN Driver installation
D:\SOUND	Realtek ALC202A AC97 For Sound driver installation
D:\UTILITY	Intel Chip set Software Installation Utility For Win 98SE, ME, 2000, XP
D:\USB 2.0	USB 2.0 Software Installation Utility For Win 98SE, 2000, ME, XP

⚠ User should remember to install the Utility right after the OS fully installed.

3-2. FLASH BIOS UPDATE

3-2-1. Introduction

Users of IND-PM855F can use the program “Awdflash.exe” contained in the Utility Disk for system BIOS update.

3-2-2. Installation of system BIOS

1. Copy “Awdflash.exe” from Driver Disk to Drive C.
2. Type the path to Awdflash.exe and execute the system BIOS
AWDFLASH F501xxxxx.bin
3. The screen will display the table below:

FLASH MEMORY WRITER v8.XX (C) Award Software 2001 All Rights Reserved
Flash Type – SST 49LF004A /3.3V File Name to Program: F5011xp1.bin Checksum: XXXXX
Error Message: Do You Want To Save BIOS (Y/N)

If you want to save up the original BIOS, enter "Y" and press < Enter >.
If you choose "N", the following table will appear on screen.

FLASH MEMORY WRITER v8.XX (C) Award Software 2001 All Rights Reserved
Flash Type – SST 49LF004A /3.3V File Name to Program: F5011xp1.bin Checksum: XXXXX
Error Message : Are You Sure To Program (Y/N)


Select "Y", and the BIOS will be renewed. When you are refreshing the BIOS, do not turn off or reset the system, or you will damage the BIOS. After you have completed all the programming, the screen displays the table below:

<p>FLASH MEMORY WRITER v8.XX (C) Award Software 2001 All Rights Reserved</p>
<p>Flash Type – SST 49LF004A /3.3V File Name to Program: F5011xp1.bin Checksum: XXXXX</p> <p>Reset System or Power off to accomplish update process!</p>
<p>F1: Reset F10: Exit</p>

Please reset or power off the system, and then the Flash BIOS is fully implemented.

3-3. VGA DRIVER UTILITY

The VGA interface embedded with our IND-PM855F can support a wide range of display. You can display CRT, LVDS simultaneously with the same mode.

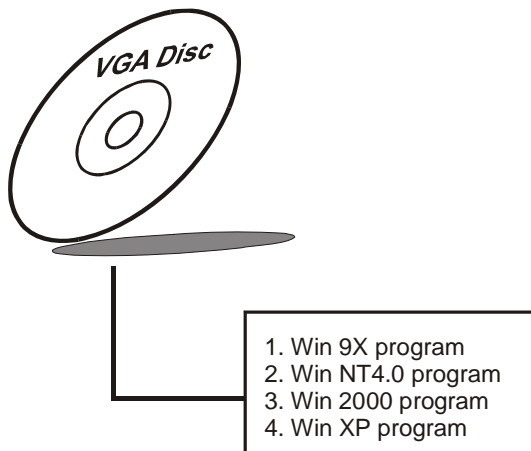

3-3-1. Installation of VGA Driver:

To install the VGA Driver, simply follow the following steps:


1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 9X/NT4.0/2000/XP system, go to the directory where VGA driver is located.
3. Click **Setup.exe** file for VGA driver installation.
4. Follow the instructions on the screen to complete the installation.
5. Once installation is completed, shut down the system and restart in order for the changes to take effect.

⚠ Under the Windows 98 system, after reboot computer, there will have two error messages appear, "Can't find ikch8xx.cat and isb8xx.cat", just skip the messages, they will not cause any effects.

3-4. LAN DRIVER UTILITY

3-4-1. Introduction

IND-PM855F is enhanced with Dual LAN function that can support various network adapters. Installation programs for LAN drivers are listed as follows:

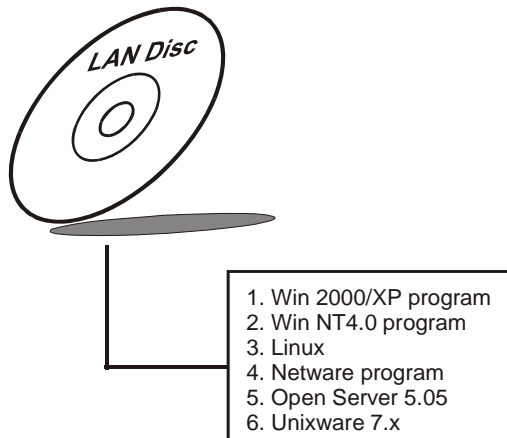


For more details on Installation procedure, please refer to Readme.txt file found on LAN DRIVER UTILITY.

3-5. SOUND DRIVER UTILITY

3-5-1. Introduction

The Realtek ALC202A sound function enhanced in this system is fully compatible with Windows 98, Windows 98SE, Windows NT 4.0, Windows 2000, Windows ME and Windows XP. Below, you will find the content of the Sound driver :

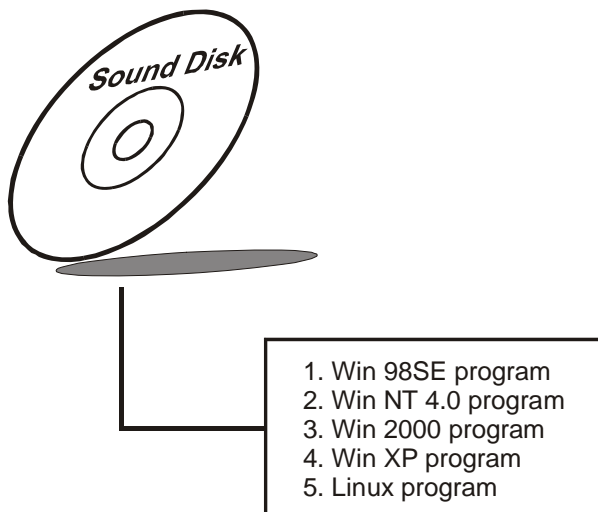

3-5-2. Installation Procedure for Windows 9x/NT/2000/XP

1. From the task bar, click on Start, and then Run.
2. In the Run dialog box, type D:\Sound\path\setup, where "D:\Sound\pathname" refers to the full path to the source files.
3. Click on the OK button or press the ENTER key.
4. Click on the "Next" and OK prompts as they appear.
5. Reboot the system to complete the driver installation.

3-6. INTEL® CHIPSET SOFTWARE INSTALLATION UTILITY

3-6-1. Introduction

The Intel® Chipset Software Installation Utility installs to the target system the Windows* INF files that outline to the operating system how the chipset components will be configured. This is needed for the proper functioning of the following features:

- Core PCI and ISAPNP Services
- AGP Support
- IDE/ATA33/ATA66/ATA100 Storage Support
- USB Support
- Identification of Intel® Chipset Components in Device Manager

3-6-2. Installation of Utility for Windows 98SE/ME/2000/XP

The Utility Pack is to be installed only for Windows 98SE, Windows ME, Windows 2000 and XP program.

It should be installed right after the OS installation, kindly follow the following steps:

1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 98SE/ME/2000/XP system, go to the directory where Utility Disc is located.
3. Click **Setup.exe** file for utility installation.
4. Follow the instructions on the screen to complete the installation.
5. Once installation is completed, shut down the system and restart in order for the changes to take effect.

3-7. USB2.0 SOFTWARE INSTALLATION UTILITY

3-7-1. Installation of Utility for Windows 98SE/ 2000/XP

Intel USB 2.0 Enhanced Host Controller driver can only be used on Windows 98SE, Windows 2000 and Windows XP on Intel Desktop boards. It should be installed right after the OS installation, kindly follow the following steps:

1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 98SE, 2000, and XP system, go to the directory where Utility Disc is located.
3. Start the “System” wizard in control panel. (Click Start/Settings/Control Panel).
4. Select “Hardware” and click “Device Manager ” button.
5. Double Click “USB Root Hub”.
6. Select “Driver”.
7. Click “Install” to install the driver.
8. Follow the instructions on the screen to complete the installation.
9. Click “Finish” after the driver installation is complete.

3-8. WATCHDOG TIMER CONFIGURATION

The I/O port address of the watchdog timer is 2E(hex) and 2F(hex). 2E (hex) is the address port. 2F(hex) is the data port. User must first assign the address of register by writing address value into address port 2E(hex), then write/read data to/from the assigned register through data port 2F (hex).

Configuration Sequence

To program W83627HG configuration registers, the following configuration sequence must be followed:

- (1) Enter the extended function mode
- (2) Configure the configuration registers
- (3) Exit the extended function mode

(1) Enter the extended function mode

To place the chip into the extended function mode, two successive writes of 0x87 must be applied to Extended Function Enable Registers (EFERs, i.e. 2Eh).

(2) Configure the configuration registers

The chip selects the logical device and activates the desired logical devices through Extended Function Index Register (EFIR) and Extended Function Data Register (EFDR). EFIR is located at the same address as EFER, and EFDR is located at address (EFIR+1).

First, write the Logical Device Number (i.e.,0x07) to the EFIR and then write the number of the desired logical device to the EFDR. Secondly, write the address of the desired configuration register within the logical device to the EFIR and then write (or read) the desired configuration register through EFDR.

(3) Exit the extended function mode

To exit the extended function mode, one write of 0xAA to EFER is required. Once the chip exits the extended function mode.

Example Program

1. Enable watchdog timer and set 30 sec. as timeout interval

```
;-----  
Mov dx, 2eh ; Enter to extended function mode  
Mov al, 87h  
Out dx, al  
Out dx, al  
;-----
```

```
Mov al, 07h ; Select Logical Device 8 of watchdog timer
Out dx,al
Inc dx
Mov al, 08h
Out dx,al
;-----
Dec dx ; Set second as counting unit
Mov al, 0f5h
Out dx,al
Inc dx
In al,dx
And al,not 08h
Out dx,al
;-----
Dec dx ; Set timeout interval as 30seconds and start counting
Mov al, 0f6h
Out dx,al
Inc dx
Mov al, 30
Out dx,al
;-----
Dec dx ; Exit the extended function mode
Mov al, 0aah
Out dx,al
```


AWARD BIOS SETUP

CHAPTER

4

This chapter shows how to set up the Award BIOS.

Section includes:

- Introduction
- Entering Setup
- The Standard CMOS Features
- The Advanced BIOS Features
- The Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PNP/PCI Configuration
- PC Health Status
- Frequency Control
- Load Fail-Safe Defaults
- Load Optimized Defaults
- Password Setting
- Save and Exit Setup
- Exit Without Saving


4-1. INTRODUCTION

This chapter will show you the function of the BIOS in managing the features of your system. The IND-PM855F Pentium M Full Size CPU Card is equipped with the BIOS for system chipset from Award Software Inc. This page briefly explains the function of the BIOS in managing the special features of your system. The following pages describe how to use the BIOS for system chipset Setup menu.

Your application programs (such as word processing, spreadsheets, and games) rely on an operating system such as DOS or OS/2 to manage such things as keyboard, monitor, disk drives, and memory.

The operating system relies on the BIOS (Basic Input and Output system), a program stored on a ROM (Read-only Memory) chip, to initialize and configure your computer's hardware. As the interface between the hardware and the operating system, the BIOS enables you to make basic changes to your system's hardware without having to write a new operating system.

The following diagram illustrates the interlocking relationships between the system hardware, BIOS, operating system, and application program:

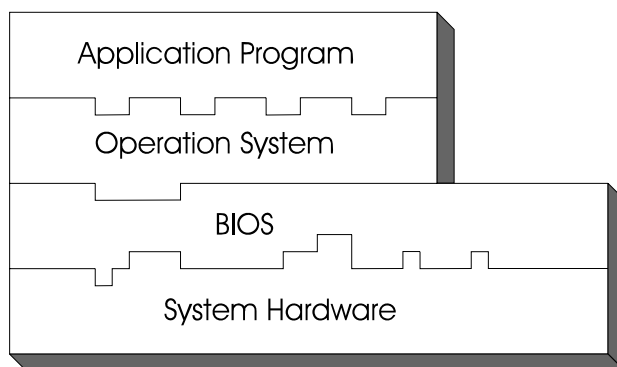

4-2. ENTERING SETUP

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines and the following message will appear on the lower screen:

PRESS TO ENTER SETUP, ESC TO SKIP MEMORY TEST

As long as this message is present on the screen you may press the key (the one that shares the decimal point at the bottom of the number keypad) to access the Setup program. In a moment, the main menu of the Award SETUP program will appear on the screen:

Phoenix - AwardBIOS CMOS Setup Utility

<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PnP/PCI Configurations ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency Control Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
Esc : Quit F10 : Save & Exit Setup	↑↓→← : Select Item
Time, Date, Hard Disk Type	

Setup program initial screen

You may use the cursor the up/down keys to highlight the individual menu items. As you highlight each item, a brief description of the highlighted selection will appear at the bottom of the screen.

4-3. THE STANDARD CMOS FEATURES

Highlight the "STANDARD CMOS FEATURES" and press the <ENTER> key and the screen will display the following table:

Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features

Date (mm:dd:yy)	Wed, May 26 2004	Item Help
Time (hh:mm:ss)	13 : 42 : 30	
► IDE Primary Master	[ST320014A]	Menu Level ►
► IDE Primary Slave	[None]	Change the internal clock.
► IDE Secondary Master	[None]	
► IDE Secondary Slave	[None]	
Drive A	[1.44M, 3.5 in.]	
Drive B	[None]	
Video	[EGA/VGA]	
Halt On	[All, But Keyboard]	
Base Memory	640K	
Extended Memory	228352K	
Total Memory	229376K	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

CMOS Setup screen

In the above Setup Menu, use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

Date:

< Month >, < Date > and <Year >. Ranges for each value are in the CMOS Setup Screen, and the week-day will skip automatically.

Time:

< Hour >, < Minute >, and < Second >. Use 24 hour clock format, i.e., for PM numbers, add 12 to the hour. For example: 4: 30 P.M. You should enter the time as 16:30:00.

IDE Primary Master / Slave:**IDE Secondary Master / Slave:**

The BIOS can automatically detect the specifications and optimal operating mode of almost all IDE hard drives. When you select type AUTO for a hard drive, the BIOS detect its specifications during POST, every time system boots.

If you do not want to select drive type AUTO, other methods of selecting drive type are available:

1. Match the specifications of your installed IDE hard drive(s) with the preprogrammed values for hard drive types 1 through 45.
2. Select USER and enter values into each drive parameter field.
3. Use the IDE HDD AUTO DETECTION function in Setup.

Here is a brief explanation of drive specifications:

Type: The BIOS contains a table of pre-defined drive types. Each defined drive type has a specified number of cylinders, number of heads, write precompensation factor, landing zone, and number of sectors. Drives whose specifications do not accommodate any predefine type are classified as type USER.

- Size: Disk drive capacity (approximate). Note that this size is usually greater than the size of a formatted disk given by a disk-checking program.
- Cyls: number of cylinders.
- Head: number of heads.
- Precomp: write precompensation cylinders.
- Landz: landing zone.
- Sector: number of sectors.
- Mode: Auto, Normal, Large or LBA.

Auto: The BIOS automatically determines the optimal mode.

- Normal: Maximum number of cylinders, heads, sectors supported are 1024, 16 and 63.
- Large: For drives that do not support LBA and have more than 1024 cylinders.

- **LBA (Logical Block Addressing):** During drive accesses, the IDE controller transforms the data address described by sector, head and cylinder number into a physical block address, significantly improving data transfer rates. For drives greater than 1024 cylinders.

DRIVE A AND DRIVE B:

Select the type of floppy disk drive installed in your system. The available options are 360KB 5.25in, 1.2KB 5.25in, 720KB 3.5in, 1.44MB 3.5in, 2.88MB 3.5in and None.

VIDEO:

This category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup. Available Options are as follows:

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode.
CGA 80	Color Graphics Adapter, power up in 80 column mode.
MONO	Monochrome adapter, includes high resolution monochrome adapters.

HALT ON:

This category allows user to choose whether the computer will stop if an error is detected during power up. Available options are “All errors”, “No errors”, “All, But keyboard”, “All, But Diskette”, and “All But Disk/Key”.

BASE MEMORY:

Displays the amount of conventional memory detected during boot up.

EXTENDED MEMORY:

Displays the amount of extended memory detected during boot up.

TOTAL MEMORY:

Displays the total memory available in the system.

HARD DISK ATTRIBUTES:

Type	Cylinders	Heads	V-P comp	LZone	Sect	Capacity
1	306	4	128	305	17	10
2	615	4	300	615	17	20
3	615	6	300	615	17	30
4	940	8	512	940	17	62
5	940	6	512	940	17	46
6	615	4	65535	615	17	20
7	642	8	256	511	17	30
8	733	5	65535	733	17	30
9	900	15	65535	901	17	112
10	820	3	65535	820	17	20
11	855	5	65535	855	17	35
12	855	7	65535	855	17	49
13	306	8	128	319	17	20
14	733	7	65535	733	17	42
15	000	0	0000	000	00	00
16	612	4	0000	663	17	20
17	977	5	300	977	17	40
18	977	7	65535	977	17	56
19	1024	7	512	1023	17	59
20	733	5	300	732	17	30
21	733	7	300	732	17	42
22	733	5	300	733	17	30
23	306	4	0000	336	17	10
24	977	5	65535	976	17	40
25	1024	9	65535	1023	17	76
26	1224	7	65535	1223	17	71
27	1224	11	65535	1223	17	111
28	1224	15	65535	1223	17	152
29	1024	8	65535	1023	17	68
30	1024	11	65535	1023	17	93
31	918	11	65535	1023	17	83
32	925	9	65535	926	17	69
33	1024	10	65535	1023	17	85
34	1024	12	65535	1023	17	102
35	1024	13	65535	1023	17	110
36	1024	14	65535	1023	17	119
37	1024	2	65535	1023	17	17
38	1024	16	65535	1023	17	136
39	918	15	65535	1023	17	114
40	820	6	65535	820	17	40
41	1024	5	65535	1023	17	42
42	1024	5	65535	1023	26	65
43	809	6	65535	852	17	40
44	809	6	65535	852	26	61
45	776	8	65335	775	33	100
47	AUTO					

Award Hard Disk Type Table

4-4. THE ADVANCED BIOS FEATURES

Choose the “ADVANCED BIOS FEATURES” in the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features

Virus Warning	[Disabled]	Item Help Menu Level ► Allows you to choose the VIRUS warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep
CPU L1 & L2 Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	
First Boot Device	[Floppy]	
Second Boot Device	[HDD-0]	
Boot Up Floppy Seek	[Enabled]	
Boot Up NumLock Status	[On]	
Typematic Rate Setting	[Disabled]	
x Typematic Rate (Chars/Sec)	6	
x Typematic Delay (Msec)	250	
Security Option	[Setup]	
OS Select For DRAM > 64MB	[Non-OS2]	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

BIOS Features Setup Screen

The “BIOS FEATURES SETUP” allow you to configure your system for basic operation. The user can select the system’s default speed, boot-up sequence, keyboard operation, shadowing and security.

A brief introduction of each setting is given below.

VIRUS WARNING :

This item allows you to choose the Virus Warning feature for IDE Hard Disk boot sector protection. If this function is enabled and someone attempt to write data into this area, BIOS will show a warning message on screen and alarm beep.

CPU L1 & L2 CACHE :

This item allows you to enable L1 & L2 cache.

QUICK POWER ON SELF-TEST:

This item allows you to speed up Power On Self Test (POST) after power-up the computer. When enabled, the BIOS will shorten or skip some check items during POST.

FIRST/SECOND/ BOOT DEVICE:

The BIOS attempt to load the operating system from the devices in the sequence selected in these items.

BOOT UP FLOPPY SEEK:

You may enable / disable this item to define whether the system will look for a floppy disk drive to boot at power-on, or proceed directly to the hard disk drive.

BOOT UP NUMLOCK STATUS:

Select power on state for NumLock.

TYPEMATIC RATE SETTING:

Enable this item if you wish to be able to configure the characteristics of your keyboard. Typematic refers to the way in which characters are entered repeatedly if a key is held down. For example, if you press and hold down the "A" key, the letter "a" will repeatedly appear on your screen on your screen until you release the key. When enabled, the typematic rate and typematic delay can be selected.

TYPEMATIC RATE (CHARS/SEC):

This item sets the number of times a second to repeat a key stroke when you hold the key down.


TYPEMATIC DELAY (MSEC):

The item sets the delay time after the key is held down before it begins to repeat the keystroke.

SECURITY OPTION:

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

 To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

OS SELECT FOR DRAM >64MB :

Select the operating system that is running with greater than 64MB or RAM on the system. You may choose OS2 or Non-OS2.

4-5. ADVANCED CHIPSET FEATURES

Choose the "ADVANCED CHIPSET FEATURES" from the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features

DRAM Data Integrity Mode	Non-ECC	Item Help
X CAS Latency Time	2.5	
X Active to Precharge Delay	7	Menu Level ▶
X DRAM RAS# to CAS# Delay	3	
X DRAM RAS# Precharge	3	
DRAM Data Integrity Mode	Non-ECC	
System BIOS Cacheable	[Enabled]	
Video BIOS Cacheable	[Disabled]	
Memory Hole At 15M-16M	[Disabled]	
Delayed Transaction	[Enabled]	
AGP Aperture Size (MB)	[64]	
** On-Chip VGA Setting **		
On-Chip VGA	[Enabled]	
On-Chip Frame Buffer Size	[32MB]	
Boot Display	[CRT]	
Panel Type	[640 x480 18bits]	
Non-Maskable Interrupt	[Disabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

Chipset Features Setup Screen

This parameter allows you to configure the system based on the specific features of the installed chipset. The chipset manages bus speed and access to system memory resources, such as DRAM and the external cache.

It also coordinates communications between conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for the system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

DRAM DATA INTEGRITY MODE:

Select Parity or ECC (error-correcting code), according to the type of installed DRAM.

CAS LATENCY TIME:

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

ACTIVE TO PRECHARGE DELAY:

This item controls the number of DRAM clocks for TRAS.

DRAM RAS# TO CAS# DELAY:

This field let's you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

DRAM RAS# PRECHARGE:

If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain data. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.

SYSTEM BIOS CACHEABLE:

Selecting Enabled allows caching of the system BIOS ROM at F0000h-FFFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

VIDEO BIOS CACHEABLE:

Select Enabled allows caching of the video BIOS, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

MEMORY HOLE AT 15M-16M:

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements.

DELAYED TRANSACTION:

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1.

AGP APERTURE SIZE:

This field determines the effective size of the Graphic Aperture used for a particular GMCH configuration. It can be updated by the GMCH-specific BIOS configuration sequence before the PCI standard bus enumeration sequence takes place. If it is not updated then a default value will select an aperture of maximum size.

4-6. INTEGRATED PERIPHERALS

Choose “INTEGRATED PERIPHERALS” from the main setup menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals

▶ OnChip IDE Device	[Press Enter]	Item Help
▶ Onboard Device	[Press Enter]	
▶ SuperIO Device	[Press Enter]	Menu Level ▶
Watch Dog Timer Select	[Disabled]	
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

Integrated Peripherals Setup Screen

By moving the cursor to the desired selection and by pressing the <F1> key, the all options for the desired selection will be displayed for choice.

- 🔔 If bios setup menu item supports USB device boot, it will cause Win9x detects the same storages twice when the system is rebooted, and USB HDD will fail.
Note: this cause just happen under Win9x, the phenomenon is a limitation.

VIA ONCHIP IDE DEVICE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility OnChip IDE Device

OnChip Primary PCI IDE	[Enabled]	Item Help
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	Menu Level ▶
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
OnChip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
IDE HDD Block Mode	[Enabled]	

↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Descriptions on each item above are as follows:

1. OnChip Primary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately.

2. Primary Master/Slave PIO Secondary Master/Slave PIO

The four IDE PIO fields allow you to set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

3. Primary Master/Slave UDMA Secondary Master/Slave UDMA

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If you

hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support.

4. IDE HDD Block Mode

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

ONBOARD DEVICE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
Onboard Device

USB Controller	[Enabled]	Item Help
USB 2.0 Support	[Enabled]	
USB Keyboard Support	[Disabled]	Menu Level ▶
USB Mouse Support	[Disabled]	
AC97 Audio	[Auto]	
Onboard LAN	[Enabled]	
Init Display First	[Onboard]	
↑↓↔←→:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. USB Controller

This should be enabled if your system has a USB installed on the system board and you want to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

2. USB Keyboard Support

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

3. USB Mouse Support

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB Mouse.

4. AC97 Audio:

This item allows you to enable/disable to support AC97 Audio.

5. Init Display First

This item allows you to decide to active whether PCI Slot or on-chip VGA first.

SUPER IO DEVICE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
SuperIO Device

Onboard FDC Controller	[Enabled]	Item Help
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	Menu Level ▶
UART Mode Select	[Normal]	
X RxD, TxD Active	Hi, Lo	
X IR Transmission Delay	Enabled	
X UR2 Duplex Mode	Half	
X Use IR Pins	IR-Rx2Tx2	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
X EPP Mode Select	EPP1.7	
X ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. Onboard FDC Controller

Select Enabled if the system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled.

2. Onboard Serial Port 1/2

Select an address and corresponding interrupt for the first and second serial ports.

3. UART Mode Select

This item allows you to select UART mode.

- 4. RxD, TxD Active**
This item allows you to determine the active of RxD, TxD.
- 5. IR Transmission Delay**
This item allows you to enable/disable IR transmission delay.
- 6. UR2 Duplex Mode**
This item allows you to select the IR half/full duplex function.
- 7. Use IR Pins**
This item allows you to select IR transmission routes, one is RxD2m, TxD2 (COM Port) and the other is IR-Rx2Tx2
- 8. Onboard Parallel Port**
This item allows you to determine access onboard parallel port controller with which I/O address.
- 9. Parallel Port Mode**
Select an operating mode for the onboard parallel (printer) port.
Select *Normal*, *Compatible*, or *SPP* unless you are certain your hardware and software both support one of the other available modes.
- 10. EPP Mode Select**
Select EPP port type 1.7 or 1.9.
- 11. ECP Mode Use DMA**
Select a DMA channel for the parallel port for use during ECP mode.
- 12. PWRON After PWR-Fail**
This item allows you to select if you want to power on the system after power failure. The choice: Off, On, Former-Sts.

4-7. POWER MANAGEMENT SETUP

Choose "POWER MANAGEMENT SETUP" option on the main menu, a display will be shown on screen as below :

Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

ACPI Function	[Enabled]	Item Help
Power Management	[User Define]	
Video Off Method	[DPMS]	
Video Off In Suspend	[Yes]	
MODEM Use IRQ	[3]	
Suspend Mode	[Disabled]	Menu Level ▶
Power-Supply Type	[ATX]	
Soft-Off by PWR-BTTN	Instant-Off	
Wake-Up by PCI card	[Enabled]	
Wake-Up On LAN	[Enabled]	
Resume by Alarm	[Disabled]	
x Date (of Month) Alarm	0	
x Time (hh:mm:ss) Alarm	0 : 0 : 0	
** Reload Global Timer Events **		
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 1	[Disabled]	
FDD, COM, LPT Port	[Disabled]	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

Power Management Setup Screen

The "Power Management Setup" allows the user to configure the system to the most effectively save energy while operating in a manner consistent with your own style of computer use.

ACPI Suspend Type:

This item allows the user to set the ACPI suspend type to be used.

POWER MANAGEMENT:

This item allows you to select the Power Management mode.

VIDEO OFF OPTION:

When enabled, this feature allows the VGA adapter to operate in a power saving mode.

Always On	Monitor will remain on during power saving modes.
Suspend --> Off	Monitor blanked when the systems enters the Suspend mode.
Susp,Stby --> Off	Monitor blanked when the system enters either Suspend or Standby modes.
All Modes --> Off	Monitor blanked when the system enters any power saving mode.

VIDEO OFF METHOD:

This determines the manner in which the monitor is blanked.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS	Select this option if your monitor supports the Display Power Management Signalling (DPMS) standard of the Video Electronics Standards to select video power management values.

MODEM USE IRQ:

This item enable you to name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system.

SUSPEND MODE:

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

SOFT-OFF BY PWR-BTTN:

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung”. The choices are Delay 4 Sec and Instant-Off.

WAKE-UP BY PCI CARD:

An input signal from PME on the PCI card awakens the system from a soft off state.

RESUME BY ALARM:

When *Enabled*, you can set the date and time at which the RTC (real-time clock) alarm awakens the system from Suspend mode.

PM EVENTS:

PM events are I/O events whose occurrence can prevent the system from entering a power saving mode or can awaken the system from such a mode. In effect, the system remains alert for anything, which occurs to a device which is configured as *Enabled*, even when the system is in a power down mode. (1) **Primary IDE 0** (2) **Primary IDE 1** (3) **Secondary IDE 0** (4) **Secondary IDE 1** (5) **FDD, COM, LPT Port**

4-8. PNP/PCI CONFIGURATION

Choose "PNP/PCI CONFIGURATION" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility		
PnP/PCI Configurations		
Reset Configuration Data	[Disabled]	Item Help
Resources Controlled By	[Auto (ESCD)]	Menu Level ►
x IRQ Resources	Press Enter	
x DMA Resource	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	Select Yes if you are using a Plug and Play capable operating system Select No if you need the BIOS to configure non-boot devices
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

PNP/PCI Configuration Setup Screen

The PNP/PCI Configuration Setup describes how to configure PCI bus system. PCI, also known as Personal Computer Interconnect, is a system, which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components.

This section covers technical items, which is strongly recommended for experienced users only.

RESET CONFIGURATION DATA:

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system configuration has caused such a serious conflict that the operating system cannot boot.

RESOURCE CONTROLLED BY:

The Award Plug and Play Bios can automatically configure all of the booth and Plug and Play-compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows 95. By choosing “manual”, you are allowed to configure the *IRQ Resources and DMA Resources*.

IRQ RESOURCES:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
IRQ Resources

IRQ-3 assigned to	[PCI Device]	Item Help
IRQ-4 assigned to	[PCI Device]	
IRQ-5 assigned to	[PCI Device]	
IRQ-7 assigned to	[PCI Device]	Menu Level ►
IRQ-9 assigned to	[PCI Device]	Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA
IRQ-10 assigned to	[PCI Device]	PnP for devices compliant with the Plug and Play standard
IRQ-11 assigned to	[PCI Device]	whether designed for PCI or ISA bus architecture
IRQ-12 assigned to	[PCI Device]	
IRQ-14 assigned to	[PCI Device]	
IRQ-15 assigned to	[PCI Device]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

13. IRQ-n Assigned to:

You may assign each system interrupt a type, depending on the type of device using the interrupt.

DMA RESOURCES:

When resources are controlled manually, assign each system DMA channel a type, depending on the type of device using the DM channel.

4-9. PC HEALTH STATUS

Choose "PC HEALTH STATUS" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
PC Health Status

Current Warning Temperature	[Disabled]	Item Help
Current CPU Temperature	47°C/116°F	Menu Level ▶
Current SYSTEM Fan Speed	0 RPM	
Current CPU Fan Speed	5152 RPM	
Vcore	1.44V	
Vccp	1.00V	
3.3 V	3.23V	
+ 5 V	4.94V	
+12 V	11.97V	
-12 V	-12.28V	
- 5 V	- 5.04V	
VBAT (V)	3.36V	
5VSB (V)	4.82V	
Shutdown Temperature	[Disabled]	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

PC Health Status Setup Screen

The PC Health Status Setup allows you to select whether to choose between monitoring or to ignore the hardware monitoring function of your system.

CURRENT WARNING TEMPERATURE:

Select the combination of lower and upper limits for the CPU temperature. If the CPU temperature extends beyond either limit, any warning mechanism programmed into your system will be activated.

CURRENT CPU TEMPERATURE:

This item shows you the current CPU temperature.

CURRENT SYSTEM FAN SPEED:

This item shows you the current System FAN speed.

CURRENT CPU FAN SPEED:

This item shows you the current CPUFAN speed.

VCORE:

This item shows you the current CPU voltage.

3.3V / +5V / +12V / -12V / -5V / 5VSB:

Show you the voltage of 3.3V/+5V/+12V/-12V/-5V/5VSB.

SHUTDOWN TEMPERATURE:

This item allows you to set up the CPU shutdown Temperature. This function is only effective under Windows 98 ACPI mode.

4-10. FREQUENCY CONTROL

Choose "FREQUENCY CONTROL" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility

Frequency Control

Auto Detect PCI Clk	[Enabled]	Item Help
Spread Spectrum	[Enabled]	
		Menu Level ►
↑↓→←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults		

Frequency Control Setup Screen

This setup menu allows you to specify your settings for frequency control.

AUTO DETECT PCI CLK:

This item allows you to enable or disable auto detect PCI Clock.

SPREAD SPECTRUM:

When the system clock generator pulses, the extreme values of the pulse generate excess EMI. Enabling pulse spectrum spread modulation changes the extreme values from spikes to flat curves, thus reducing EMI. This benefit may in some cases be outweighed by problems with timing-critical devices such as a clock-sensitive SCSI device.

4-11. LOAD FAIL-SAFE DEFAULTS

By pressing the <ENTER> key on this item, you get a confirmation dialog box with a message similar to the following:

Load Fail-Safe Defaults (Y/N) ? N

To use the BIOS default values, change the prompt to "Y" and press the <Enter > key. CMOS is loaded automatically when you power up the system.

4-12. LOAD OPTIMIZED DEFAULTS

When you press <Enter> on this category, you get a confirmation dialog box with a message similar to the following:

Load Optimized Defaults (Y/N) ? N

Pressing "Y" loads the default values that are factory setting for optimal performance system operations.

4-13. PASSWORD SETTING


User is allowed to set either supervisor or user password, or both of them. The difference is that the supervisor password can enter and change the options of the setup menus while the user password can enter only but do not have the authority to change the options of the setup menus.

TO SET A PASSWORD

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Enter Password:

Type the password up to eight characters in length, and press < Enter >. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press the < Enter > key. You may also press < Esc > to abort the selection and not enter a password.

 User should bear in mind that when a password is set, you will be asked to enter the password everything you enter CMOS setup Menu.

TO DISABLE THE PASSWORD

To disable the password, select this function (do not enter any key when you are prompt to enter a password), and press the <Enter> key and a message will appear at the center of the screen:

PASSWORD DISABLED!!!
Press any key to continue...

Press the < Enter > key again and the password will be disabled. Once the password is disabled, you can enter Setup freely.


4-14. SAVE & EXIT SETUP

After you have completed adjusting all the settings as required, you must remember to save these setting into the CMOS RAM. To save the settings, select “SAVE & EXIT SETUP” and press <Enter>, a display will be shown as follows:

Phoenix - AwardBIOS CMOS Setup Utility	
► Standard CMOS Features	► Frequency Control
► Advanced BIOS Features	Load Fail-Safe Defaults
► Advanced Chipset Features	Load Optimized Defaults
► Integrated Peripherals	Set Supervisor Password
► Power Management	word
► PnP/PCI Configura	etup
► PC Health Status	Saving
Save to CMOS and EXIT Y/N)? Y	
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	
Save Data to CMOS	

When you confirm that you wish to save the settings, your system will be automatically restarted and the changes you have made will be implemented. You may always call up the setup program at any time to adjust any of the individual items by pressing the key during boot up.

EXPANSION BUS

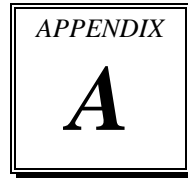

This appendix indicates the pin assignments.

Section includes:

- ISA BUS Pin Assignment
- PCI BUS Pin Assignment
- EPCI BUS Pin Assignment
- Compact Flash Card Pin Assignment

ISA BUS PIN ASSIGNMENT


There are two edge connectors (called "gold fingers") on this CPU Card, on the right hand is the connector of ISA Bus, followed up by PCI BUS connector. The ISA-bus connector is divided into two sets: one consists of 62 pins; the other consists of 36 pins. The pin assignments are as follows :

D18														D1														B31														B1													
□□																																																							

PCI BUS PIN ASSIGNMENT

Like ISA-BUS connector, the PCI-BUS edge connector is also divided into two sets: one consists of 98-pin; the other consists of 22-pin.

The pin assignments are as follows :



B		A		B		A	
PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	-12V	A1	TRST#	B31	+3.3V	A31	AD18
B2	TCK	A2	+12V	B32	AD17	A32	AD16
B3	GND	A3	TMS	B33	C/BE2#	A33	+3.3V
B4	TDO	A4	TDI	B34	GND	A34	FRAME#
B5	+5V	A5	+5V	B35	IRDY#	A35	GND
B6	+5V	A6	INTA#	B36	+3.3V	A36	TRDY#
B7	INTB#	A7	INTC#	B37	DEVSEL#	A37	GND
B8	INTD#	A8	+5V	B38	GND	A38	STOP#
B9	REQ3#	A9	CLKC	B39	LOCK#	A39	+3.3V
B10	REQ1#	A10	+5V(I/O)	B40	PERR#	A40	SDONE
B11	GNT3#	A11	CLKD	B41	+3.3V	A41	SB0#
B12	GND	A12	GND	B42	SERR#	A42	GND
B13	GND	A13	GND	B43	+3.3V	A43	PAR
B14	CLKA	A14	GNT1#	B44	C/BE1#	A44	AD15
B15	GND	A15	RST#	B45	AD14	A45	+3.3V
B16	CLKB	A16	+5V(I/O)	B46	GND	A46	AD13
B17	GND	A17	GNT0#	B47	AD12	A47	AD11
B18	REQ0#	A18	GND	B48	AD10	A48	GND
B19	+5V(I/O)	A19	REQ2#	B49	GND	A49	AD09
B20	AD31	A20	AD30	B52	AD08	A52	C/BE0#
B21	AD29	A21	+3.3V	B53	AD07	A53	+3.3V
B22	GND	A22	AD28	B54	+3.3V	A54	AD06
B23	AD27	A23	AD26	B55	AD05	A55	AD04
B24	AD25	A24	GND	B56	AD03	A56	GND
B25	+3.3V	A25	AD24	B57	GND	A57	AD02
B26	C/BE3#	A26	GNT2#	B58	AD01	A58	AD00
B27	AD23	A27	+3.3V	B59	+5V(I/O)	A59	+5V(I/O)
B28	GND	A28	AD22	B60	ACK64#	A60	REQ64#
B29	AD21	A29	AD20	B61	+5V	A61	+5V
B30	AD19	A30	GND	B62	+5V	A62	+5V

EPCI CONNECTOR

You will find a EPCI connector in our IND-PM855F board.
The pin assignments are as follows:



PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	GND	B1	GND
A2	AD0	B2	AD1
A3	AD2	B3	AD3
A4	AD4	B4	AD5
A5	AD6	B5	AD7
A6	AD8	B6	AD9
A7	AD10	B7	AD11
A8	VCC	B8	VCC
A9	AD12	B9	AD13
A10	AD14	B10	AD15
A11	AD16	B11	AD17
A12	AD18	B12	AD19
A13	AD20	B13	AD21
A14	AD22	B14	AD23
A15	VCC	B15	VCC
A16	AD24	B16	AD25
A17	AD26	B17	AD27
A18	AD28	B18	AD29
A19	AD30	B19	AD31
A20	PIRQ#B	B20	PAR
A21	PP CLK	B21	IRDY#
A22	ID SEL	B22	TRDY#
A23	CBE#0	B23	CBE#1
A24	CBE#2	B24	CBE#3
A25	PGNT#4	B25	PREQ#4
A26	SERR#	B26	PERR#
A27	PIRQ#A	B27	PCI_RST#
A28	STOP#	B28	PLOCK#
A29	DEVSEL#	B29	FRAME#
A30	GND	B30	GND

- The EPCI expansion connector of this Card is designed based on PCI Bus Master.


COMPACT FLASH CARD PIN ASSIGNMENT

You will find a Compact Flash connector in our IND-PM855F.
The pin assignments are as follows :

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	26	-CD1
2	D03	27	D111
3	D04	28	D121
4	D05	29	D131
5	D06	30	D141
6	D07	31	D151
7	-CS0	32	-CS11
8	A102	33	-VS1
9	-ATASEL	34	-IORD
10	A092	35	-IOWR
11	A082	36	-WE3
12	+3.3V	37	INTRQ
13	VCC	38	VCC
14	A062	39	-CSEL
15	A052	40	-VS2
16	A042	41	-RESET
17	A032	42	IORDY
18	A02	43	-INPACK
19	A01	44	-REG3
20	A00	45	-DASP
21	D00	46	-PDIAG
22	D01	47	D081
23	D02	48	D091
24	-IOCS16	49	D101
25	-CD2	50	GND

- Because ATA33 cable and ATA66/100 cable pin34 specification are different, therefore, while CF card and other devices are using IDE 2 channel at the same time, the ATA66/100 cable will make the device detecting time expand. Thus, it is suggested to use ATA33 cable to avoid the problem.

TECHNICAL SUMMARY

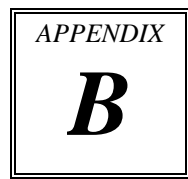


This section introduce you the maps concisely.

Section includes:

- Block Diagram
- Interrupt Map
- RTC & CMOS RAM Map
- Timer & DMA Channels Map
- I / O & Memory Map

BLOCK DIAGRAM

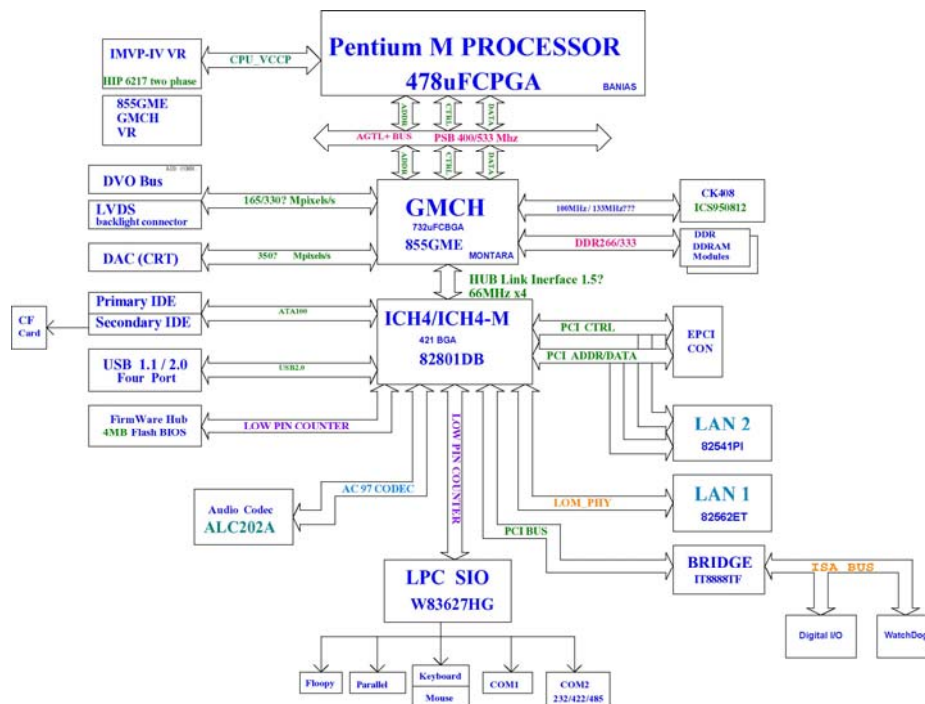

INTERRUPT MAP

IRQ	ASSIGNMENT
0	System TIMER
1	Keyboard
2	Cascade
3	Serial port 2
4	Serial port 1
5	Available
6	Floppy
7	Parallel port 1
8	RTC clock
9	Available
10	Available
11	Available
12	PS/2 Mouse
13	Math coprocessor
14	IDE1
15	IDE2

RTC & CMOS RAM MAP

CODE	ASSIGNMENT
00	Seconds
01	Second alarm
02	Minutes
03	Minutes alarm
04	Hours
05	Hours alarm
06	Day of week
07	Day of month
08	Month
09	Year
0A	Status register A
0B	Status register B
0C	Status register C
0D	Status register D
0E	Diagnostic status byte
0F	Shutdown byte
10	Floppy Disk drive type byte
11	Reserve
12	Hard Disk type byte
13	Reserve
14	Equipment byte
15	Base memory low byte
16	Base memory high byte
17	Extension memory low byte
18	Extension memory high byte
30	Reserved for extension memory low byte
31	Reserved for extension memory high byte
32	Date Century byte
33	Information Flag
34-3F	Reserve
40-7f	Reserved for Chipset Setting Data

TIMER & DMA CHANNELS MAP

Timer Channel Map :

Timer Channel	Assignment
0	System timer interrupt
1	DRAM Refresh request
2	Speaker tone generator

DMA Channel Map :

DMA Channel	Assignment
0	Available
1	Available
2	Floppy
3	Available
4	Cascade
5	Available
6	Available
7	Available

I/O & MEMORY MAP

Memory Map :

MEMORY MAP	ASSIGNMENT
0000000-009FFFF	System memory used by DOS and application
00A0000-00BFFFF	Display buffer memory for VGA/ EGA / CGA / MONOCHROME adapter
00C0000-00DFFFF	Reserved for I/O device BIOS ROM or RAM buffer.
00E0000-00EFFFF	Reserved for PCI device ROM
00F0000-00FFFFFF	System BIOS ROM
0100000-FFFFFFFF	System extension memory

I/O Map :

I/O MAP	ASSIGNMENT
000-01F	DMA controller (Master)
020-021	Interrupt controller (Master)
022-023	Chipset controller registers I/O ports.
040-05F	Timer control registers.
060-06F	Keyboard interface controller (8042)
070-07F	RTC ports & CMOS I/O ports
080-09F	DMA register
0A0-0BF	Interrupt controller (Slave)
0C0-0DF	DMA controller (Slave)
0F0-0FF	Math coprocessor
1F0-1F8	Hard Disk controller
278-27F	Parallel port-2
2B0-2DF	Graphics adapter controller
2F8-2FF	Serial port-2
360-36F	Net work ports
378-37F	Parallel port-1
3B0-3BF	Monochrome & Printer adapter
3C0-3CF	EGA adapter
3D0-3DF	CGA adapter
3F0-3F7	Floppy disk controller
3F8-3FF	Serial port-1