

# ***IND-486D***

**486 Half-size CPU Card  
with Flash Disk**

## **COPYRIGHT©**

This document is a copyright of the original manufacturer, 1998. The original manufacturer reserves the right to make improvements to the product(s) described in this manual at any time without notice. This manual may not, in whole or in part, be photocopied, reproduced, transcribed, translated, or transmitted in whatever form without the written consent of the manufacturer, except for copies retained by the purchaser for backup purposes. All rights are reserved.

## **TRADEMARKS**

Pentium<sup>®</sup> is a registered trademark of Intel Corporation.

The following are trademarks or registered trademarks of their respective companies: IBM, Intel, AMD, Cyrix, Award, AMI, Microsoft, Windows, Windows NT, Novell, SCO, PC/104, PICMG, ALI, UMC, SMC, Winbond. Products mentioned in this manual are mentioned for identification purposes only. All names of products or services appearing in this manual are the trademarks or registered trademarks of their respective organizations and companies.

© Copyright 1998

Ver. No. 1.0  
IND-486D-00  
Date : 08. 12. 1999

# TABLE OF CONTENTS

CHAPTER 1 : INTRODUCTION.....	4
1.2 Specifications .....	5
1.3 Packing Check List.....	6
1.4 Board Outline of IND-486D.....	7
CHAPTER 2 : JUMPER SETTINGS & CONNECTORS.....	8
2.1 Jumper Settings for IND-486D .....	9
2.2 Connectors Description .....	12
CHAPTER 3 : AWARD BIOS SETUP .....	19
3.1 Running Award Bios .....	19
3.2 CMOS Setup Utility .....	20
3.3 Standard CMOS Setup .....	21
3.4 BIOS Features Setup .....	23
3.5 Chipset Features Setup .....	26
3.6 Power Management Setup.....	28
3.7 PCI Configuration .....	30
3.8 Load BIOS Defaults .....	32
3.9 Load Setup Defaults .....	32
3.10 Supervisor/User Password.....	33
3.11 IDE HDD Auto Detection .....	33
3.12 HDD Low Level Format .....	34
3.13 Save & Exit Setup .....	34
3.14 Exit Without Saving.....	35
3.15 Integrated Peripherals.....	36
APPENDIX A : HOW TO USE WATCH-DOG TIMER.....	37
APPENDIX B : TECHNICAL REFERENCE .....	38
APPENDIX C : PC/104 MODULE INSTALLATION.....	39

# CHAPTER 1 : INTRODUCTION

---

## 1.1 Preface

Thank you for selecting Indocomp Systems IND-486D CPU Card. The IND-486D is a 486 Half-Size CPU card with Flash Disk feature that is a highly performance card with vasive enhanced function. This board is designed to constitute noise tolerant and low power consumption CMOS technology that allows the IND-486D to withstand and adapt harsh industrial environments very well.

The IND-486D is built as an ISA expansion card that is simply upgraded by changing one card from another without replacing the whole system. It provides the primarily elements for building an IBM PC/AT compatible computer for a wide variety of embedded system applications. The IND-486D is fully compatible with the IBM PC/AT which means virtually all the software written for the IBM PC/AT will run on the IND-486D CPU card.

## 1.2 Specifications

### Features

- CPU
- Chipset
- System Memory
  
- Cache Size
- BIOS
- Flash memory Disk
  
- Bus Interface
- DMA
- RTC Battery
- Interrupts
- IDE Drive Interface
- Floppy Drive Interface
- Serial Port
- Parallel Port
- PS/2 Mouse Connector
- Keyboard Connector
- External Power Connector
- Watchdog Timer
- PC/104 Expansion Bus
- Operating Temperature
- Humidity
- Dimensions
- Net weight

### Supported Elements

- : Intel 80486 series, AMD 486 series, AMD • Cyrix 5x86 series
- : ALI M1489/M1487 & SMC37C669 Chipsets
- : Two 72-pin SIMM sockets for FPM/EDO DRAM up to 128MB and support memory parity function
- : 128KB~512KB L2 Cache (Default 256KB)
- : 128KB Award licensed BIOS
- : Reserved socket for DiskOnChip from M-System; support up to 24MB Flash memory disk.
  
- : ISA bus
- : 8 DMA channels
- : DS-12887A RTC or compatible
- : 16 levels of hardware interrupts
- : One PCI IDE port supports up to two hard drives
- : One FDD port supports up to floppy drives
- : Two 16550 compatible FIFO RS-232 serial ports
- : One multi-mode parallel port (SPP / EPP / ECP)
- : On-board PS/2 Mouse connector
- : 5-pin header and 6-pin Mini-Din connectors
- : 8-pin external power connector
- : 8 level time-out intervals (0.5/1/2/4/8/16/32/64 sec.)
- : Built-in PC/104 expansion bus
- : 0°C ~55°C
- : 10%~90% RH
- : 185 x 122 mm
- : 235 g


## INTRODUCTION

---

### 1.3 Packing Check List


Item	Qty	Remark
IND-486D CPU Card	1 pc.	
5-pin header to 5-pin header keyboard adapter cable	1 pc.	
6-pin PS/2 Mini-Din to 5-pin AT Din keyboard adapter cable	1 pc,	
IDE/Floppy cable	1 set	1 x 34-pin female flat cable 1 x 40-pin female flat cable
Printer port cable	1 pc.	26-pin female flat connector to 25-pin D-sub female connector
PC/104 Mounting Kit	1 set	4 x brass spacer 4 x nut 1 x ( 2 x 20 ) pin header 1 x ( 2 x 32 ) pin header
User's manual	1 pc.	

## 1.4 Board Outline of IND-486D

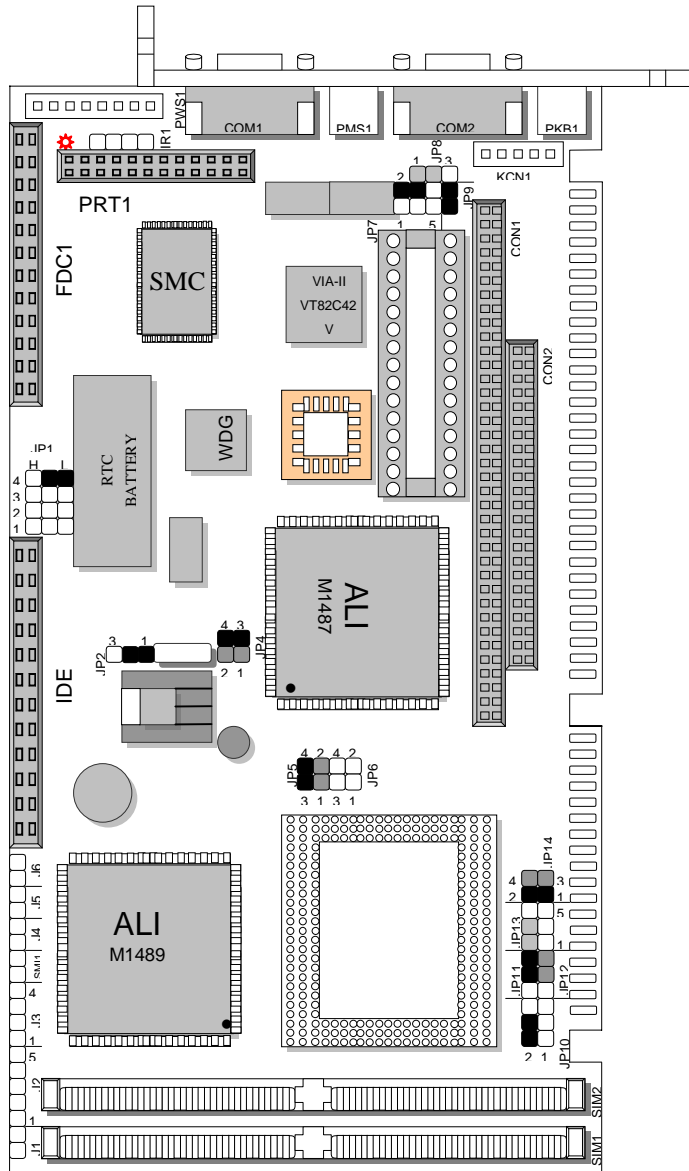

# CHAPTER 2 : JUMPER SETTINGS & CONNECTORS


The figure below shows the jumpers and connectors location for the IND-486D :

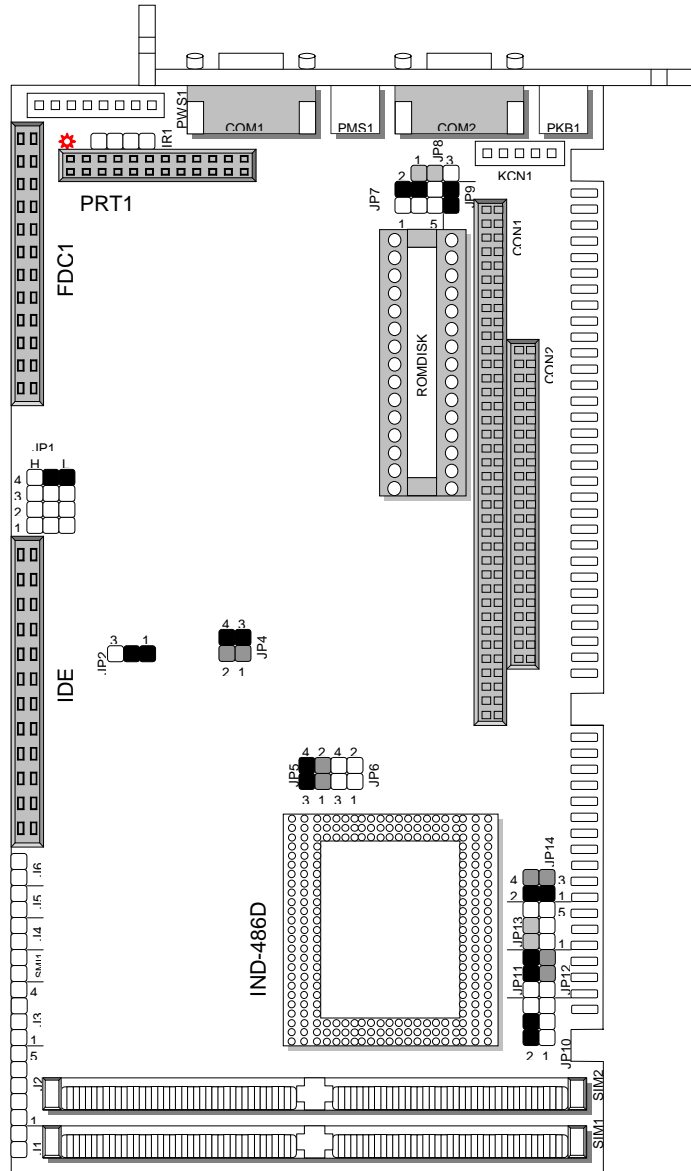



## 2.1 Jumper Settings for IND-486D


Jumpers are used to select the operation modes for your system. To set a jumper, a black cap containing metal contacts is placed over the jumper pin(s) according to the required configuration. A jumper is said to be “on” or “1-2” when the black cap has been placed on one or two of its pins, as show in the figure below:

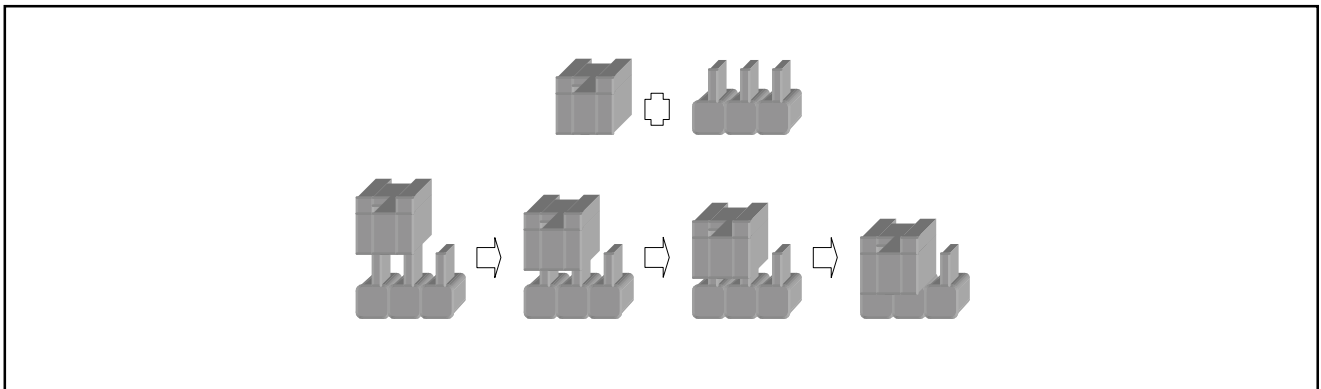

### ● JP1 : Select Watch-Dog Timeout Period

Time Out Period	JP1
0.5 sec.	1L
1 sec.	2L
2 sec.	3L
4 sec. (Default)	4L
8 sec.	4H
16 sec.	3H
32 sec.	2H
64 sec.	1H

Example :

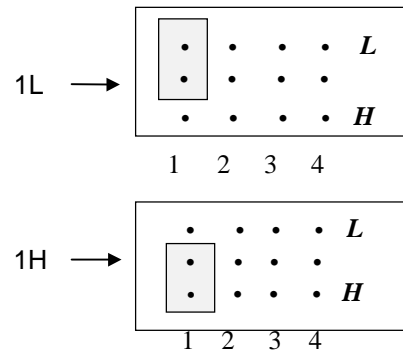

### ● JP2, JP4 : External CPU Clock Select

External CPU Clock	JP2	JP4	CPU Type
25 MHz	1-2	OFF	486SX-25, DX-25. SX2-50. DX2-50
33 MHz (Default)	1-2	1-2, 3-4	486SX/DX-33, SX2/DX2/DE2-66, DX4-100, 5x86-100/133
40 MHz	2-3	3-4	486DX-40, DX2-80, DX4-120
50 MHz	2-3	1-2	DX-50

## JUMPER SETTINGS & CONNECTORS

### ● JP5, JP6 : CPU Voltage Select

CPU Voltage Select	JP5	JP6
3.3 V (Default)	1-2, 3-4	OFF
5 V	OFF	1-2, 3-4

### ● JP7 : DiskOnChip (ROM Disk) Address Select

Address	JP7
C8000 - CFFFF	1-2
D0000 - D7FFF	3-4
D8000 - DFFFF	5-6

Note : Default is OFF; and a spare jumper is available at 1-2.

### ● JP8 : Select Watch-Dog Active Type

Watch-Dog Active Type	JP8
Reset System (Default)	1-2
NMI System	2-3
Disable	OFF

### ● JP9 : Select PS/2 Mouse & IRQ12 Function

PS/2 Mouse & IRQ12 Function	JP9
Enable, IRQ12 use by PS/2 Mouse (Default)	ON
Disable, IRQ12 Release	OFF

## IND-486D USER'S MANUAL

---

● **JP10, JP11, JP12, JP13, JP14 : CPU Type Select**

CPU Type	JP10	JP11	JP12	JP13	JP14
I486SX	OFF	1-2	1-2	OFF	OFF
I486DX/DX2/ODP; AmDX4-V8T	OFF	1-2	2-3	OFF	OFF
I486DX4-100	OFF	1-2	2-3	2-4	1-2, 3-4
Am486DX2-V8T	OFF	1-2	2-3	3-5	OFF
Am486DE2-66V8T	2-4	1-2	2-3	2-4, 3-5	1-2, 3-4
Write-Back Enhance CPU AMD <sup>+</sup> Am486DX2/DX4-xxx SV8B AmDX4-xxx SV16B AMD <sup>+</sup> Am5x86-P75 (Default : AmDX4-xxx SV8B)	2-4, 3-5 : AmDX2-SV8B; Am5x86-133 2-4 : AmDX4-SV8B; Intel W/B Enhance	2-3	2-3	2-4	1-2, 3-4
Cyrix Cx486 (DX/DX2/DX4)-GP	1-3, 4-6	1-2	2-3	1-3, 4-6	OFF
Cyrix Cx486DX/DX2/DX4; Cyrix Cx5X86	2-4	1-2	2-3	2-4	1-2, 3-4

\* **Note** : Please follow the above jumper setting of your selected CPU, otherwise the screen display will response slower after 15 seconds (instead of the normal 7 seconds).

**SM : External SMI Switch**

ON : Break (Sleep)

OFF : Normal

## JUMPER SETTINGS & CONNECTORS

---

### 2.2 Connectors Description

The connectors allow the CPU card to connect with other parts of the system. Some problems encountered with your system may be caused by loose or improper connections. Ensure that all connectors are in place and firmly attached.

CONNECTOR	FUNCTION
COM1	RS-232 PORT#1 CONNECTOR
PMS1	PS/2 MOUSE CONNECTOR
COM2	RS-232 PORT#2 CONNECTOR
PKB1	PS/2 KEYBOARD CONNECTOR
KCN1	5-PIN HEADER KEYBOARD CONNECTOR
PIDE1	PRIMARY EIDE CONNECTOR
FDC1	FLOPPY CONNECTOR
PRT1	PRINTER CONNECTOR
IR1	IRDA CONNECTOR
CN1	PC104 8-BIT CONNECTOR
CN2	PC104 16-BIT CONNECTOR
PWS1	8-PIN EXTERNAL POWER CONNECTOR
J1	RESET CONNECTOR
J2	PIN1 & PIN 3 FOR POWER LED; 4-5 FOR KEYLOCK
J3	EXTERNAL SPEAKER CONNECTOR
J4	HDD ACTIVE LED CONNECTOR
J5	TURBO SWITCH CONNECTOR
J6	TURBO LED CONNECTOR

**2.2.1 System Status Indicate and Control Connectors**

<b>CONNECTOR</b>	<b>PIN NO.</b>	<b>DESCRIPTION</b>
J1 : RESET CONNECTOR	1	GND
	2	Reset Signal
J2 : POWER LED & KEYLOCK CONNECTOR	1	+5V
	2	NC
	3	GND
	4	Keylock Signal
	5	GND
J3 : EXTERNAL SPEAKER CONNECTOR	1	Speaker Signal
	2	NC
	3	GND
	4	+5V
J4 : HDD ACTIVE LED CONNECTOR	1	HDD ACTIVE # Signal
	2	+5V
J5 TURBO SWITCH	1	GND
	2	Turbo Signal
J6: TURBO LED CONNECTOR	1	+5V
	2	Active # Signal

## JUMPER SETTINGS & CONNECTORS

### 2.2.2 I/O Connectors Description

#### ● KCN1 : 5 PIN HEADER KEYBOARD CONNECTOR (HEADER)

PIN NO.	DESCRIPTION
1	Keyboard Clock
2	Keyboard Data
3	External Power Good
4	Ground
5	+5V

#### ● PKB1 : PS/2 KEYBOARD CONNECTOR (Mini Din)

PIN NO.	DESCRIPTION
1	Keyboard Data
2	NC
3	Ground
4	+5V
5	Keyboard Clock
6	NC

#### ● PRT1 : PARALLEL PORT CONNECTOR (HEADER)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Strobe #	14	Auto Form Feed #
2	Data 0	15	Error #
3	Data 1	16	Initialize #
4	Data 2	17	Printer Select IN #
5	Data 3	18	Ground
6	Data 4	19	Ground
7	Data 5	20	Ground
8	Data 6	21	Ground
9	Data 7	22	Ground
10	Acknowledge #	23	Ground
11	Busy	24	Ground
12	Paper Empty	25	Ground
13	Printer Select	26	NC

## IND-486D USER'S MANUAL

---

### ● COM2 : RS-232 PORT #2 CONNECTOR (D-Sub)

PIN NO.	DESCRIPTION
1	Data Carrier Detect (DCD#)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR#)
5	Ground (GND)
6	Data Set Ready (DSR#)
7	Request To Send (RTS#)
8	Clear To Send (CTS#)
9	Ring Indicator (RI#)

### ● PMS1 : PS/2 MOUSE CONNECTOR (Mini Din)

PIN NO.	DESCRIPTION
1	Mouse Data
2	NC
3	Ground
4	+5V
5	Mouse Clock
6	NC

### ● COM1 : RS-232 PORT #1 CONNECTOR (D-Sub)

PIN NO.	DESCRIPTION
1	Data Carrier Detect (DCD#)
2	Receive Data (RXD)
3	Transmit Data (TXD)
4	Data Terminal Ready (DTR#)
5	Ground (GND)
6	Data Set Ready (DSR#)
7	Request To Send (RTS#)
8	Clear To Send (CTS#)
9	Ring Indicator (RI#)

## **JUMPER SETTINGS & CONNECTORS**

### ● **PIDE1 : PCI IDE INTERFACE CONNECTOR (HEADER)**

<b>PIN NO.</b>	<b>DESCRIPTION</b>	<b>PIN NO.</b>	<b>DESCRIPTION</b>
1	Reset #	2	Ground
3	Data 7	4	Data 8
5	Data 6	6	Data 9
7	Data 5	8	Data 10
9	Data 4	10	Data 11
11	Data 3	12	Data 12
13	Data 2	14	Data 13
15	Data 1	16	Data 14
17	Data 0	18	Data 15
19	Ground	20	NC
21	DMA REQ	22	Ground
23	IOW#	24	Ground
25	IOR#	26	Ground
27	IOCHRDY	28	NC
29	DMA ACK#	30	Ground
31	Interrupt	32	IOCS16#
33	SA1	34	NC
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD Active #	40	Ground

### ● **IR1 : Alternate IrDa**

<b>PIN NO.</b>	<b>DESCRIPTION</b>
1	IRRX2
2	Ground
3	IRTX2
4	+5V



## IND-486D USER'S MANUAL

---

### ● FDC1 : FLOPPY INTERFACE CONNECTOR (HEADER)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Ground	2	Density Select
3	Ground	4	NC
5	Ground	6	NC
7	Ground	8	Index #
9	Ground	10	Motor Enable A#
11	Ground	12	Drive Select B#
13	Ground	14	Drive Select A#
15	Ground	16	Motor Enable B#
17	Ground	18	Direction #
19	Ground	20	Step #
21	Ground	22	Write Data #
23	Ground	24	Write Gate #
25	Ground	26	Track 0 #
27	Ground	28	Write Protect #
29	NC	30	Read Data #
31	Ground	32	Head Side Select #
33	NC	34	Disk Change #


### ● PWS1 : EXTERNAL POWER CONNECTOR

PIN NO.	DESCRIPTION
1	+5V
2	+12V
3	-12V
4	GND
5	GND
6	-5V
7	+12V
8	+5V

## JUMPER SETTINGS & CONNECTORS

### ● CN1, CN2 : PC104 CONNECTOR

PIN NO.	DESCRIPTION			
	CN1		CN2	
	ROW A	ROW B	ROW C	ROW D
1	IOCHCK#	GND	GND	GND
2	SD7	RSTDRV	SBHE#	MEMCS16#
3	SD6	+5V	LA23	IOCS16#
4	SD5	IRQ9	LA22	IRQ10
5	SD4	-5V	LA21	IRQ11
5	SD4	-5V	LA21	IRQ11
5	SD4	-5V	LA21	IRQ11
6	SD3	DRQ2	LA20	IRQ12
7	SD2	-12V	LA19	IRQ15
8	SD1	0 WS#	LA18	IRQ14
9	SD0	+12V	LA17	DACK0#
10	IOCHRDY	NC	MEMR#	DRQ0
11	AEN	SMEMW#	MEMW#	DACK5#
12	SA19	SMEMR#	SD8	DRQ5
13	SA18	IOW#	SD9	DACK6#
14	SA17	IOR#	SD10	DRQ6
15	SA16	DACK3#	SD11	DACK7#
16	SA15	DRQ3	SD12	DRQ7
17	SA14	DACK1#	SD13	+5V
18	SA13	DRQ1	SD14	MASTER#
19	SA12	REFRESH#	SD15	GND
20	SA11	SYSCLK	NC	GND
21	SA10	IRQ7	-	-
22	SA9	IRQ6	-	-
23	SA8	IRQ5	-	-
24	SA7	IRQ4	-	-
25	SA6	IRQ3	-	-
26	SA5	DACK2#	-	-
27	SA4	TC	-	-
28	SA3	BALE	-	-
29	SA2	+5V	-	-
30	SA1	OSC	-	-
31	SA0	GND	-	-
32	GND	GND	-	-

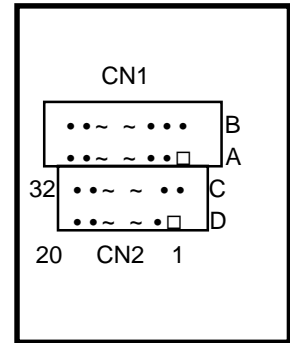

## **CHAPTER 3 : AWARD BIOS SETUP**

---

The Award's ROM BIOS provides a built-in Setup program which allows the user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS RAM; so the acquired data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM stay unchanged unless there is a configuration change in the system, such as hard drive replacement or new equipment is installed.

### **3.1 Running Award Bios**

When the power of system is turned on, the BIOS will enter the Power On Self Test (POST) routines. These routines perform various diagnostic checks. If an error is encountered, then the error will be reported into two different ways namely : (1) If the error occurs before the display device is initialized, a series of beeps will be transmitted; (2) If the error occurs after the display device is initialized, the screen will display the error message.

After the POST routines are completed, the following message appears:

“Press DEL to enter SETUP”

To access the AWARD BIOS SETUP program, press the <DEL> key. The [CMOS SETUP UTILITY] screen will be displayed at this time.

# AWARD BIOS SETUP

---

## 3.2 CMOS Setup Utility

The Main Program Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79) CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PCI CONFIGURATION LOAD SETUP DEFAULTS LOAD BIOS DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT SAVE & EXIT SETUP EXIT WITHOUT SAVING
ESC : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
IRQ Settings, Latency Timers ...	

This screen provides access to the utility's various functions.

Listed below are explanation of the keys displayed at the bottom of the screen:

**<ESC>** : Exit the utility.

**ARROW KEYS** : Use the arrow keys (↑ ↓ → ←) to move cursor to the desired selection.

**<F10>** : Saves all changes made to Setup and exits program.

**<Shift><F2>** : Changes background and foreground colors.

## 3.3 Standard CMOS Setup

Selecting "STANDARD CMOS SETUP" on the main program screen displays this menu:

The Standard CMOS Setup Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79)																																				
STANDARD CMOS SETUP																																				
AWARD SOFTWARE, INC.																																				
Date (mm : dd : yy) : Tue, Mar 25 1997																																				
Time (hh : mm : ss) : 14 : 16 : 48																																				
<table border="1"><thead><tr><th>HARD DISKS</th><th>TYPE</th><th>SIZE</th><th>CYLS</th><th>HEAD</th><th>PRECOMP</th><th>LANDZ</th><th>SECTOR</th><th>MODE</th></tr></thead><tbody><tr><td>Primary Master</td><td>: Auto</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>Auto</td></tr><tr><td>Primary Slave</td><td>: Auto</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>0</td><td>Auto</td></tr></tbody></table>										HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE	Primary Master	: Auto	0	0	0	0	0	0	Auto	Primary Slave	: Auto	0	0	0	0	0	0	Auto
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE																												
Primary Master	: Auto	0	0	0	0	0	0	Auto																												
Primary Slave	: Auto	0	0	0	0	0	0	Auto																												
Drive A : 1.44M, 3.5in																																				
Drive B : None																																				
Floppy 3 Mode Support : Disabled																																				
Video : EGA /VGA																																				
Halt ON : ALL Errors																																				
ESC : Quit																																				
F1 : Help																																				
Base Memory : 640K																																				
Extended Memory : 64512K																																				
Other Memory : 384K																																				
Total Memory : 65536K																																				
↑ ↓ → ← : Select Item																																				
PU / PD / + / - : Modify																																				
( shift ) F2 : Change Color																																				

The Standard CMOS Setup utility is used to configure the following features:

**Set Date:** Month, Date, Year.

**Set Time:** Hour, Minute and Second. Use 24-Hour clock format (for p.m., add 12 to the hour, so you should enter 4:30 p.m. as 16:30 )

**Hard Disks** : There are two hard disks listed as : “Primary Master” and “Primary Slave”. For each IDE channel, the first device is the “Master” and the second device is “Slave”. Hard disk Types are the standard 1 to 45 ones. To choose, (1) Type “ Auto ” for IDE HDD auto detection, (2) Type “ User ” for user definable, and (3) Type “ None ” for not installed (e.g. SCSI). There are six categories of information you must enter for a HDD: “ CYLS ” (number of cylinders), “ HEAD ” (number of heads), “ PRECOMP ” (write pre-compensation), “ LANDZ ” (landing zone), “ SECTOR ” (number of sectors) and ” MODE “ (Normal, LBA, LARGE and AUTO). The hard disk manufacturer’s documentation should provide you the necessary information that you needed. For an IDE hard drive, you can set “ TYPE ” to “ Auto ” or use the “ IDE HDD AUTO DETECTION ” utility in the main program screen to enter the drive specifications.

The AWARD BIOS supports three HDD modes: NORMAL, LBA and LARGE.

**NORMAL mode** : Generic access mode in which neither the BIOS nor the IDE controller will make any transformation during accessing. The maximum HDD size supported by the NORMAL mode is 528 Megabytes.

**LBA mode** : Logical Block Addressing mode is a HDD accessing method to overcome the 528 Megabytes restriction. The number of cylinders, heads and sectors shown in setup may not be the number physically contained in the HDD.

During HDD accessing , the IDE controller will transform the logical address described by the cylinder, head and sector numbers into its own physical address inside the HDD. The maximum HDD size supported by the LBA mode is 8.4 Gigabytes.

**LARGE mode** : Some IDE HDD contains more than 1024 cylinders without LBA support. This access mode tricks DOS(or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, number of heads is multiplied by 2.

A reverse transformation process will be made inside INT13H in order to accessing the right HDD address. The maximum HDD size supported by the LARGE mode is 1 Gigabytes.

Note : To support LBA or LARGE mode, there must be some software involved. All these software are located in the AWARD HDD Service Routine “ INT13H ”. It may fail to access a HDD with LBA or LARGE modes selected if you are running under an Operating System

## IND-486D USER'S MANUAL

---

which replaces the whole INT13H service routine.

**Floppy Drive A and Floppy Drive B:** The options are: “ 360K, 5.25 in. ”, “ 1.2M, 5.25in ”, “ 720K, 3.5in. ”, “ 1.44M, 3.5in. ”, “ 2.88M, 3.5in. ” and “ None (Not Installed) ”. Not Installed could be used as an option for diskless workstations.

### 3.4 BIOS Features Setup

Selecting the “ BIOS Features Setup ” and the Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79)			
BIOS FEATURES SETUP			
AWARD SOFTWARE, INC			
Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CFFFF Shadow	: Disabled
External Cache	: Enabled	D0000-D7FFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	D8000-DFFFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI		
Swap Floppy Drive	: Disabled		
Boot Up Floppy Seek	: Disabled		
Boot Up NumLock Status	: On		
Boot up System Speed	: High		
Gate A20 Option	: Fast		
Memory Parity check	: Disabled		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250	ESC : Quit	↑↓→← : Select Item
Security Option	: Setup	F1 : Help	PU /PD /+/- : Modify
PCI /VGA Palette Snoop	: Disabled	F5 : Old Values	(Shift) F2 : Color
OS Select For DRAM > 64MB	: Non-OS2	F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

The following explains the options for each feature:

**Virus Warning:** The Virus Warning's default setting is “Disabled”. When enabled, any attempt to write the boot sector and partition table will halt the system and cause a warning

## **AWARD BIOS SETUP**

---

message to appear. If this happens, you can use an anti-virus utility on a virus free, bootable floppy diskette to reboot and clean your system.

**CPU Internal Cache** : The default setting is “ Enabled ”. This setting enables the CPU internal cache.

**External Cache** : The default setting is “ Enabled ”. This setting enables the external cache.

**Quick Power On Self Test** : The default setting is “ Enabled ”. If enabled, this will skip some diagnostic checks during the Power On Self Test (POST) to speed up booting process.

**Boot Sequence** : The default setting is “ C, A ”, the other option are “ CDROM, C, A ” and “ A, C ” and “ C, CDROM, A ”. The BIOS will load the operating system from the disk drives in the sequence selected here.

**Swap Floppy Drive** : The default setting is “ Disabled ”. This setting gives you an option to swap A and B floppy disks. Normally the floppy drive A is the one at the end of the cable, if you set this option to “ Enabled ”, the drive at the end of the cable will be swapped to B.

**Boot Up Floppy Seek** : The defaults setting is “ Disabled ”. When enabled, the BIOS will check whether there is a floppy disk drive installed.

**Boot Up Numlock Status**: The default setting is “ On ”. If set “ Off ”, the cursor controls will function on the numeric keypad.

**Gate A20 Option**: the defaults setting is “ Fast ”. This is the optimal setting for the CPU card. The other option is “Normal”.

**Typematic Rate Setting**: The default setting is “ Disabled ”. If enabled, you can set the typematic Rate and typematic Delay.

**Typematic Rate (Chars/Sec)** : This setting controls the speed at which the system registers repeated keystrokes. The choices range from 6 to 30 Chars/Sec. The default setting is “ 6 ” Chars/Sec.



## **IND-486D USER'S MANUAL**

---

**Typematic Delay (Msec)** : This setting controls the time between the display of the first and second characters. There are four delay choices: 250ms, 500ms, 750ms and 1,000ms. The default setting is " 250 " ms.

**Security Option:** This setting controls the password feature. The options are " Setup " and "System". Select "Setup" will protect the configuration settings from being tampered with. Select " System " if you want to use password feature every time the system boots up. The default setting is "Setup". You can create your password by using the " SUPERVISOR/USER PASSWORD " utility on the main program screen.

**PCI/VGA Palette Snoop** : The default setting is " Disabled ". Set to " Enable " if any ISA adapter card installed requires VGA palette snooping.

**Video BIOS Shadow** : The default setting is " Enabled " which will copy the VGA BIOS into system DRAM.

**C8000-CFFFF Shadow to D8000-DFFFF Shadow** : The default setting for the shadow feature is " Disabled ". When enabled, the ROM with the specific address is copied into system DRAM. It will also reduce the size of memory available to the system.

**PS/2 mouse function control** : The Default setting is " Enabled ". Set to " Disabled " when a PS/2 mouse is not attached to the system.

**OS Select For DRAM > 64MB** : The default setting is " Non-OS2 ". Set to " OS2 " if the system memory size is greater than 64MB and the operating system is OS/2.

After you have made your selection in the BIOS FEATURES SETUP, press the <ESC> key to go back to the main program screen.

### 3.5 Chipset Features Setup

Selecting “ **CHIPSET FEATURES SETUP** ” and the Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79) CHIPSET FEATURES SETUP AWARD SOFTWARE, INC.			
AUTO Configuration : Enabled  AT-BUS Clock : CLK/4 DRAM Read Timing : Normal DRAM Write Timing : Normal SRAM Read Timing : 3-1-1-1 SRAM Write Timing : 0 Wait  Hidden Refresh : Disabled Memory Hole (15M - 16M) : Disabled ISA I/O Recovery : Enabled Fast-Back-to-Back : Enabled		Special Functions Port : Disabled Touch Controller IRQ : Disabled	
		ESC : Quit                    ↑↓→←: Select Item F1 : Help                      PU /PD /+ / - : Modify F5 : Old Values                (Shift) F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults	

This screen controls the settings for the board’s chipset. All the entries on the screen are automatically configured. However, you can change it according to your operating environment.

## **IND-486D USER'S MANUAL**

---

**Auto Configuration** : The default setting is “ Enabled ” which will be optimal DRAM timing automatically depending on whether the DRAM used is 70ns or 60ns. The other option is “ Disabled ” which allows you to change DRAM timing manually.

**DRAM Timing** : Choose DRAM speed 60ns or 70ns.

**Memory Hole At 15M~16M** : The default setting is “ Disabled ”. Set to “ Enabled ” means that when the system memory size is equal to or greater than 16M bytes, the physical memory address from 15M to 16M will be passed to PCI or ISA and there will be 1M Bytes hole in your system memory. This option is designed for some OS with special add-on cards which need 15M-16M memory space.

After you have made your selections in the CHIPSET FEATURES SETUP, press the <ESC> key to go back to the main program screen.

### 3.6 Power Management Setup

The “Power Management Setup” controls the CPU card’s “Green” features.

**Selecting “POWER MANAGEMENT SETUP” and the Screen appears as ...**

ROM PCI / ISA BIOS (2A4KDL79)			
POWER MANAGEMENT SETUP			
AWARD SOFTWARE, INC.			
Power Management	: User Define	IRQ5 (LPT 2)	: ON
PM Control by APM	: Yes	IRQ6 (Floppy Disk)	: ON
Video Off Option	: Susp, Stby -> Off	IRQ7 (LPT 1)	: ON
Video Off Method	: V/H SYNC+ Blank	IRQ8 (RTC Alarm)	: OFF
MODEM Use IRQ	: 3	IRQ9 (IRQ2 Redir)	: ON
** PM Timers **		IRQ10 (Reserved)	: OFF
HDD Power Down	: Disable	IRQ11 (Reserved)	: OFF
Doze Mode	: Disable	IRQ12 (PS/2 Mouse)	: ON
Standby Mode	: Disable	IRQ13 (Coprocessor)	: OFF
Suspend Mode	: Disable	IRQ14 (Hard Disk)	: ON
** PM Events **		IRQ15 (Reserved)	: OFF
VGA	: OFF	ESC : Quit    ↑↓→← : Select Item	
FDD (3FXh)	: ON	F1 : Help     PU /PD/+/- : Modify	
LPT & COM	: LPT/COM	F5 : Old Values    ( Shift ) F2 : Color	
HDD (1FXh)	: ON	F6 : Load BIOS Defaults	
NMI	: OFF	F7 : Load Setup Defaults	
IRQ3 (COM 2)	: ON		
IRQ4 (COM 1)	: ON		

**Power Management** : This setting controls the System Doze Mode, Standby Mode and Suspend Mode Timer features. There are four options:

**User Define** : Allows you to customize all power saving timer features.

## **IND-486D USER'S MANUAL**

---

**Optimize** : This is the recommended setting for general use.

**Test/Demo** : This is for test/demonstration purpose.

**Disable** : Disable the power management features.

**PM Control by APM** : The default setting is “ No ”. If set to “ Yes ”, system BIOS will wait for APM's prompt before it enters any PM mode.

**Note** : If your system power management is controlled by APM and there is a task running, the APM will not prompt the BIOS to enter any power saving mode after time out.

**Video Off Method** : This setting controls the Video off method in power saving mode. The default setting is “ V/H SYNC+Blank ”. This setting disables V/H SYNC signals and blanks the screen in power saving mode. Other options are “ Blank Screen ” and “ DPMS ”.

**Doze Mode** : Options are from “ 1 Minute ” to “ 1 Hour ” and “ Disable ”. The system speed will change from turbo to slow if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

**Standby Mode** : Options are from “ 1 Minute ” to “ 1 Hour ” and “ Disable ”. The system speed will change from turbo to slow and the video signal will be suspended if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

**Suspend Mode** : Option are from “ 1 Minute ” to “ 1 Hour ” and “ Disable ”. The CPU clock will be stopped and the video signal will be suspended if no Power Management events occur for a specified length of time. Full power function will return when a Wake-Up event is detected.

**HDD Power Down** : Options are from “ 1 Minute ” to “ 15 Minutes ” and “ Disable ”. The IDE hard drive will spin down if it is not accessed within a specified length of time.

**Wake-Up Events** : When a hardware event is enabled, the occurrence of a corresponding event will return the system to full speed.

## AWARD BIOS SETUP

**Power Down/Resume Event:** when a hardware event is enabled, the occurrence of a corresponding event will prevent the system from entering any PM mode.

After you have made your selection in the POWER MANAGEMENT SETUP, press the <ESC> key to go back to the main program screen.

### 3.7 PCI Configuration

Both the ISA and PCI use on the CPU card use system IRQs & DMAs. You must set up the IRQ and DMA assignments correctly through the PCI Configuration Setup utility, otherwise the CPU Card will not work properly.

Selecting "PCI CONFIGURATION" and the Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79)			
PCI CONFIGURATION SETUP			
AWARD SOFTWARE, INC.			
PnP BIOS Auto-Config.	: Disabled	CPU to PCI Write Buffer	: Enabled
Slot 1 Using INT#	: Auto	CPU to PCI Byte Merge	: Enabled
Slot 2 Using INT#	: Auto	PCI to DRAM Buffer	: Enabled
1st Available IRQ	: NA		
2nd Available IRQ	: NA		
3rd Available IRQ	: NA		
4th Available IRQ	: NA		
PCI IRQ Activated By	: Level		
PCI IDE IRQ Map To	: PCI-AUTO		
Primary IDE INT#	: A		
Secondary IDE INT#	: B		
		ESC : Quit    ↑↓→← : Select Item	
		F1 : Help    PU /PD/+/- : Modify	
		F5 : Old Values ( Shift ) F2 : Color	
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

## **IND-486D USER'S MANUAL**

---

**Resources Controlled By:** The defaults setting is "Auto" which will control all IRQs automatically. The other option is "Manual" which allows you to control IRQs individually.

**IRQ Assigned to :** If there is a legacy ISA device which uses an IRQ, set the corresponding IRQ to " Legacy ISA", otherwise you should set to PCI/ISA.

**PCI IRQ Active By:** Options are "Level" or "Edge". The default setting is "Level". This option is used to select the IRQ's trigger method.

**PCI IDE IRQ Map To, Primary IDE INT#, Secondary IDE INT#:** If you disable onboard PCI IDE controller and install a PCI IDE card on the CPU Card, you need to set this option. If a PCI IDE Card which uses ISA IRQ directly through a paddle card installed on an ISA slot, select "ISA" for the option "PCI IDE IRQ Map To". If a PCI IDE Card uses PCI "INT" and is compliant to PCI Plug and Play specification, select "PCI-AUTO" for the option "PCI IDE IRQ Map To". Otherwise select "PCI-SLOT 1, PCI-SLOT 2 or PCI-SLOT 3, PCI-SLOT4 ) depends on which slot the PCI IDE Card is installed.

Only INT A and INT B are available for a PCI IDE Card, therefore you must set the PCI IDE Card's primary interrupt to INT A and secondary interrupt to INT B. The INT A is routed to IRQ 14 and the INT B is routed to IRQ 15 through a hardware router in the chipset.

### 3.8 Load BIOS Defaults

The BIOS defaults have been set by the manufacturer and represent settings which provide the minimum requirements for your system to operate.

### 3.9 Load Setup Defaults

“LOAD SETUP DEFAULTS” loads optimal settings which are stored in BIOS ROM.

The defaults loaded only affect the BIOS Features Setup, Chipset Features Setup, Power Management Setup, PCI configuration setup and Integrated Peripherals Setup. There is no effect on the Standard CMOS Setup. To use this feature, highlight on the main screen and press <Enter>. A line will appear on the screen asking if you want to load the Setup default values. Press the <Y> key and then press the <Enter> key if you want to load the Setup defaults. Press <N> if you don't want to proceed.

**Onboard FDD Controller:** The default setting is “Enabled”. This option enables the onboard FDD controller.

**Onboard UART 1 and Onboard UART 2:** These options are used to assign the I/O addresses for the two onboard serial ports. They can be assigned as follows:

Auto [**Default**]

3F8 / IRQ4

2F8 / IRQ3

3E8 / IRQ4

2E8 / IRQ3

Disabled (Disable the onboard serial port)

**Onboard Parallel Port:** This option is used to assign the I/O address for the onboard parallel port. The options are “378/IRQ7” (defaults), “278/IRQ7”, “3BC/IRQ7” and “Disabled” (disable the onboard parallel port). Note: Printer port always uses IRQ7 when set “378/IRQ7” or “278/IRQ7” or “3BE/IRQ7” to “Enabled”.

**Onboard Parallel Mode:** There are four options “Normal” (default), “ECP”, “ECP/EPP” and “EPP/SPP”. Change the mode from “Normal” to the enhanced mode only if your peripheral device can support it. When set to ECP mode, the printer port always use DMA3.



### **3.10 Supervisor/User Password**

The "SUPERVISOR/USER PASSWORD" utility sets the password. The CPU card is shipped with the password disabled. If you want to change the password, you must first enter the current password, then at the prompt enter your new password. The password is case sensitive and you can use up to 8 alphanumeric characters, press <Enter> after entering the password. At the next prompt, confirm the new password by typing it and pressing <Enter> again.

To disable the password, press the <Enter> key instead of entering a new password when the "Enter Password" dialog box appears. A message will appear confirming that the password is disabled.

If you have set both supervisor and user password, only the supervisor password, only the supervisor password allows you to enter the BIOS SETUP PROGRAM.

Note:

If you forget your password, the only way to solve this problem is to discharge the CMOS memory by turning power off and placing a shunt on the S1 (open pad) for 5 seconds, then removing the shunt.

### **3.11 IDE HDD Auto Detection**

If your system has an IDE hard drive, you can use this utility to detect its parameters and enter them into the Standard CMOS Setup automatically.

If the auto-detected parameters displayed do not match the ones that should be used for your hard drive, do not accept them. Press the <N>key to reject the values and enter the correct ones manually on the Standard CMOS Setup screen.

Note: If you are setting up a new hard disk drive (nothing on it) that supports LBA mode, more than one line will appear in the parameter box, choose the line that lists LBA for an LBA drive.

Do not choose Large or Normal if the hard disk drive is already fully formatted when you install it, choose the mode "HDD Low Level Format" to format it.

### 3.12 HDD Low Level Format

Selecting this option and pressing the <Enter> key enable you to perform low level format of hard disk drive.

### 3.13 Save & Exit Setup

Selecting this option and pressing the <Enter> key to save the new setting information in the CMOS memory and continue with the booting process.

The Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79) CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PCI CONFIGURATION LOAD SETUP DEFAULTS LOAD BIOS DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT Load SETUP Defaults (Y/N) ? Y SAVING
ESC : Quit F10 : Save & Exit Setup	↑ ↓ → ← : Select Item (Shift) F2 : Change Color
Load Setup Defaults except Standard CMOS SETUP	

## 3.14 Exit Without Saving

Selecting this option and pressing the <Enter > key to exit the Setup Utility without recording any new values or changing old ones.

The Screen appears as ...

ROM PCI / ISA BIOS (2A4KDL79) CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PCI CONFIGURATION LOAD SETUP DEFAULTS LOAD BIOS DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT Save to CMOS and EXIT (Y/N) ? Y SAVING
ESC : Quit F10 : Save & Exit Setup	↑ ↓ → ← : Select Item (Shift) F2 : Change Color
Save Data to CMOS & Exit SETUP	

### 3.15 Integrated Peripherals

**IDE HDD Block Mode:** The Default setting is “Enabled”. This feature enhances hard disk performance by making multi-sector transfers instead of one sector per transfer. Most IDE drives, except very early design, have Block Mode transfer feature.

**PCI Slot IDE 2nd Channel:** The default setting is “Enabled”. This option enables the Secondary PCI IDE controller of the PCI IDE controller of the PCI IDE adapter.

**On-Chip Primary/Secondary PCI IDE:** The default setting is “Enabled”. This option enables the onboard Primary /Secondary PCI IDE controller.

#### **IDE Primary Master PIO, IDE Primary Slave PIO, IDE Secondary Master PIO, IDE Secondary Slave PIO:**

There are six options “Auto”, “Mode 0”, “Mode 1”, “Mode 2”, “Mode 3” and “Mode 4”. The default setting is “Auto”. When set to “Auto” the BIOS will automatically set the mode to match the transfer rate of hard disk. If the system won't boot up when set to “Auto”, set it manually to the lower mode. (e.g. From Mode 3 to Mode 2). All IDE drives should work with PIO mode 0.

## APPENDIX A : HOW TO USE WATCH-DOG TIMER

---

Enable and Retrigger the Watch-Dog timer: **443H**

Disable: **43H**

### EX.1: For DOS

Execute the **DEBUG.EXE** file under DOS, Then key-in **i443**. The system will reboot automatically according to the time-out you set.

For example, if you want to Set **4 seconds** for the time-out, you should set **JP1 : 4L ON** and **JP8 : 1-2 ON** to enable watch-dog timer.

```
C:\DOS> DEBUG
-i443
```

### EX.2 : For assemble Language

```
Enable :
      :
      :
MOV DX, 443H
IN AL, DX
      :
      :
```

```
Disable :
      :
      :
IN AL, 43H
      :
      :
```

## APPENDIX B : TECHNICAL REFERENCE

---

### I/O PORT ADDRESS MAP

Address	Function
000 - 01F	DMA Controller #1
020 - 03F	Interrupt Controller #1
040 - 05F	Timer Chip
043	Disable Watch-Dog Times Operation (Read)
060 - 06F	Keyboard Controller
070 - 07F	Read Time Clock/NMI Mask
080 - 09F	DMA Page Register
0A0 - 0BF	Interrupt Controller #2
0C0 - 0DF	DMA Controller #2
0F0 - 0F1	Clear/Reset Math Coprocessor
1F0 - 1F7	Hard Disk Controller
200 - 210	Game Port
278 - 27F	Parallel Port #2
2E8 - 2EF	Serial Port #4 (COM 4)
2F8 - 2FF	Serial Port #2 (COM 2)
300 - 31F	prototype Card/Streaming Tape Adapter
360 - 36F	PC Network
378 - 3FF	Parallel Port #1
380 - 38F	SDLC #2
3A0 - 3AF	SDLC #1
3B0 - 3BF	MDA Video Card (Including LPT0)
3C0 - 3CF	EGA Card
3D0 - 3DF	CGA Card
3E8 - 3EF	Serial Port #3 (COM 3)
3F0 - 3F7	Floppy Disk Controller
3F8 - 3FF	Serial Port #1 (COM 1)
443	Enable Watch-dog Timer Operation (read)

## APPENDIX C : PC/104 MODULE INSTALLATION

---

There are two steps to install the PC/104 module on IND-486D Single Board Computer.

1. Plug the Dual Side Male Connector into the PC/104 female connector.
2. Plug the PC/104 module's female connector into the IND-486D male connector.

